NESPRESSO

My Machine

Lattissima Touch

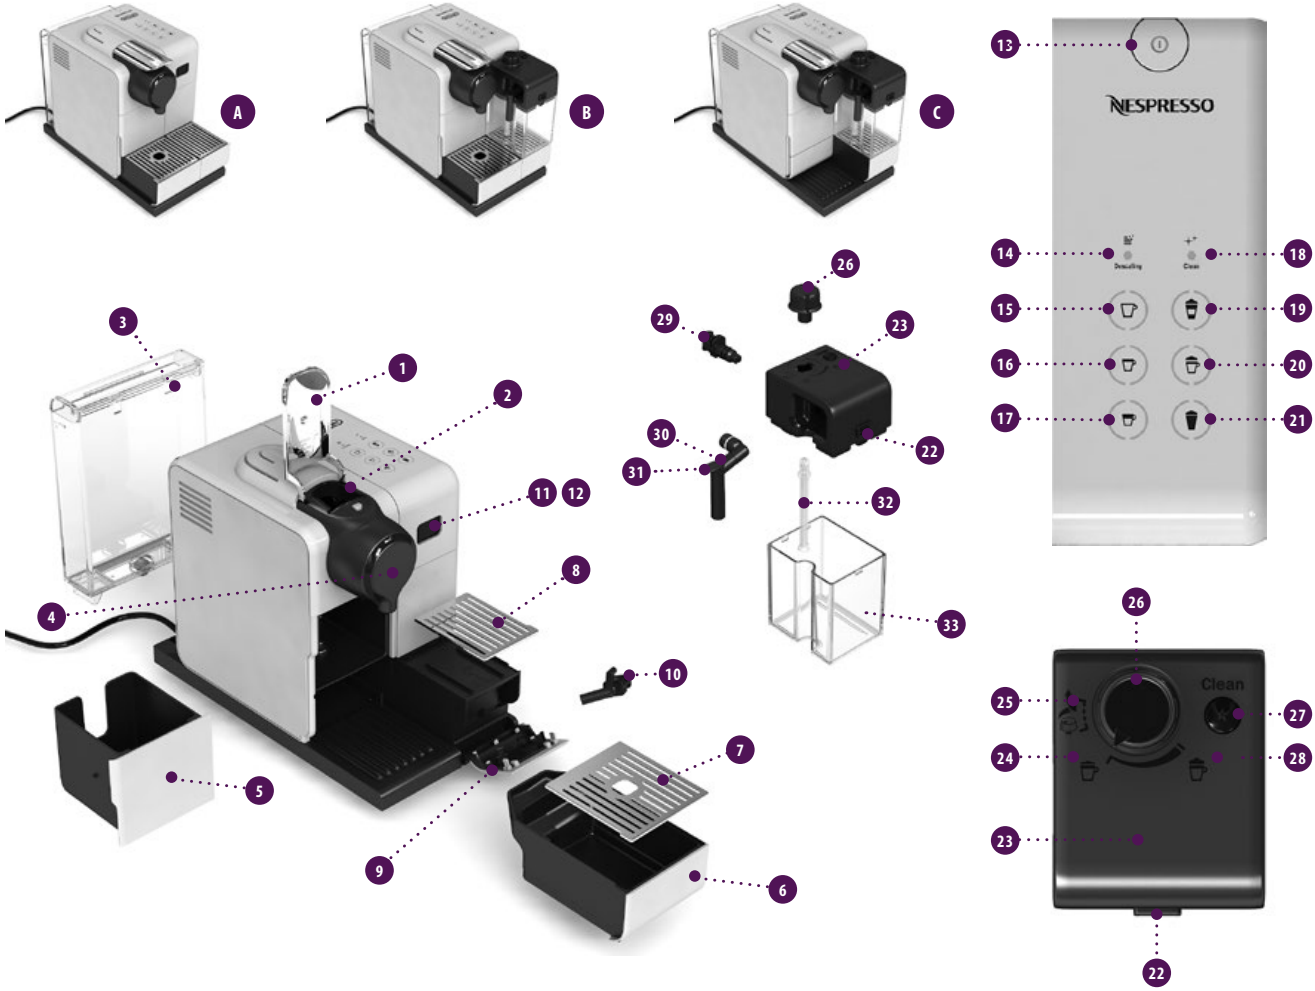
A
B
C
NESPRESSO
Clean
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33

Overview of machine

- A Machine without Rapid Cappuccino System
- B Machine with Rapid Cappuccino System (for Cappuccino)
- C Machine with Rapid Cappuccino System (for Latte Macchiato)

- 1 Lever
- 2 Capsule compartment
- 3 Water tank (0.9 L)
- 4 Coffee outlet
- 5 Used capsule container
- 6 Drip tray (push inside for Latte Macchiato glass)
- 7 Left grid
- 8 Right grid
- 9 Descaling pipe storage door (pull to open)
- 10 Descaling pipe
- 11 Steam connector door
- 12 Steam connector

Tactile beverage buttons

- 13 ON/OFF button
- 15 Lungo 110 ml
- 16 Espresso 40 ml
- 17 Ristretto 25 ml
- 19 Latte Macchiato
- 20 Cappuccino
- 21 Warm milk froth

Alert

- 14 «Descaling» : descaling alert refer to section «Descaling»
- 18 «Clean» ☆ : milk system cleaning alert refer to section «Preparing Cappuccino»

Rapid Cappuccino System (R.C.S.)

- 22 Lid detach button
- 23 Milk container Lid
- 24 Milk froth density: MIN
- 25 Position for milk froth regulator knob (insertionremoval)
- 26 Milk froth regulator knob
- 27 CLEAN ☆ : Rinsing button
- 28 Milk froth density: MAX
- 29 Rapid Cappuccino System connector
- 30 Milk spout
- 31 Milk Spout Lever
- 32 Milk aspiration tube
- 33 Milk container (0.35 L)

Nespresso, an exclusive system creating the perfect Espresso, time after time. All *Nespresso* machines are equipped with a unique extraction system that guarantees up to 19 bar pressure. Each parameter has been calculated with great precision to ensure that all the aromas from each Grand Cru coffee can be extracted, to give the coffee body and create an exceptionally thick and smooth crema.

CONTENT/CONTENT

⚠ **CAUTION:** when you see this sign, please refer to the safety precautions to avoid possible harm and damage.
ⓘ **INFORMATION:** when you see this sign, please take note of the advice for the correct and safe usage of your coffee machine.

OVERVIEW 03
SAFETY PRECAUTIONS 06
PACKAGING CONTENT 09
FIRST USE OR AFTER A LONG PERIOD OF NON-USE/ 10
COFFEE PREPARATION 12
ASSEMBLING/DISASSEMBLING OF RAPID CAPPUCCINO SYSTEM (R.C.S.) 12
PREPARING CAPPUCCINO - LATTE MACCHIATO - WARM MILK FROTH 13
PROGRAMMING COFFEE QUANTITY 16
PROGRAMMING QUANTITY FOR CAPPUCCINO - LATTE MACCHIATO - WARM MILK FROTH 17
DAILY CARE 18
HAND WASHING OF RAPID CAPPUCCINO SYSTEM (R.C.S.) 19
RESTORING QUANTITY TO FACTORY SETTINGS 19
FACTORY SETTINGS 20
DESCALING 21
WATER HARDNESS SETTING 23
EMPTYING THE SYSTEM BEFORE A PERIOD OF NON-USE, FOR FROST PROTECTION OR BEFORE A REPAIR 24
AUTOMATIC POWER OFF 25
TROUBLESHOOTING 26
SPECIFICATIONS 26
DISPOSAL AND ECOLOGICAL CONCERNS 27
CONTACT THE *NESPRESSO* CLUB 27
WARRANTY 27

EN

SAFETY PRECAUTIONS

⚠ CAUTION: the safety precautions are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.

⚠ CAUTION: when you see this sign, please refer to the safety precautions to avoid possible harm and damage.

ⓘ INFORMATION: when you see this sign, please take note of the advice for the correct and safe usage of your appliance.

- The appliance is intended to prepare beverages according to these instructions.
- Do not use the appliance for other than its intended use.
- This appliance has been designed for indoor and non-extreme temperature conditions use only.
- Protect the appliance from direct sunlight effect, prolonged water splash and humidity.
- This appliance is intended to be used in households and similar applications only such as: staff kitchen areas in shops, offices and other working environments, farm houses; by clients in hotels, motels and other residential environments; bed and breakfast type environments.
- This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and they are supervised by an adult.
- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the device safely and understand the dangers.
- Children should not use the device as a toy.
- The manufacturer accepts no responsibility and the warranty will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, non-professionals' repair or failure to comply with the instructions.

Avoid risk of fatal electric shock and fire

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the warranty.

The appliance must only be connected after installation

- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and damp.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.
- If the cord is damaged, do not operate the appliance.
- Return the appliance to the *Nespresso* Club or to a *Nespresso* authorized representative.
- If an extension cord is required,

use only an earthed cord with a conductor cross-section of at least 1.5 mm^2 or matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water, coffee, descaler or similar.
- Disconnect the appliance from the mains when not in use for a long period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.
- Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
- Never touch the cord with wet hands.
- Never immerse the appliance or part of it in water or other liquid.
- Never put the appliance or part of it in a dishwasher, except the Rapid Cappuccino System (R.C.S.).
- Electricity and water together is dangerous and can lead to fatal electrical shocks.
- Do not open the appliance. Hazardous voltage inside!
- Do not put anything into any openings. Doing so may cause fire or electrical shock!

Avoid possible harm when operating the appliance

- Never leave the appliance unattended during operation.
- Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the plug from the power socket. Contact the *Nespresso* Club or *Nespresso* authorized representative for examination, repair or adjustment.
- A damaged appliance can cause electrical shocks, burns and fire.
- Always completely close the lever and never lift it during operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Do not touch surfaces that become hot during and after operation and descaling: descaling pipe and milk spout. Use handles or knobs.
- If coffee volumes higher than 150 ml are programmed: let the machine cool down for 5 minutes before making the next coffee. Risk of overheating!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use a damaged or deformed capsule. If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call the *Nespresso* Club or *Nespresso* authorized representative.
- Fill the water tank only with fresh and potable water.
- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
- Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
- To clean machine, use only clean cleaning tools.
- When unpacking the machine, remove the plastic film and dispose.
- This appliance is designed for *Nespresso* coffee capsules available exclusively through the *Nespresso* Club or your *Nespresso*

authorized representative.
- All *Nespresso* appliances pass stringent controls. Reliability tests under practical conditions are performed randomly on selected units. This can show traces of any previous use.
- *Nespresso* reserves the right to change instructions without prior notice.

Descaling
- *Nespresso* descaling agent, when used correctly, helps ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day. For the correct amount and procedure to follow, consult the user manual included in the *Nespresso* descaling kit.

⚠ **CAUTION:** the descaling solution can be harmful. Avoid contact with eyes, skin and surfaces. Never use any product other than the *Nespresso* descaling kit available at the *Nespresso* Club to avoid damage to your machine. For any additional questions you may have regarding descaling, please contact your *Nespresso* Club.

SAVE THESE INSTRUCTIONS

Pass them on to any subsequent user.
This instruction manual is also available as a PDF at nespresso.com

PACKAGING CONTEN

EN

Coffee machine

User manual

Care of Rapid Cappucino System leaflet

Capsules set

«Welcome to *Nespresso* folder»

FIRST USE OR AFTER A LONG PERIOD OF NON-USE

⚠ **CAUTION:** first read the safety precautions to avoid risks of fatal electrical shock and fire.

⚠ **AVERTISSEMENT:** commencez par lire les consignes de sécurité pour éviter les risques de décharges électriques mortelles et d'incendie.

1. When unpacking the machine, remove the plastic film and dispose from both left grid and right grid, and machine panels.

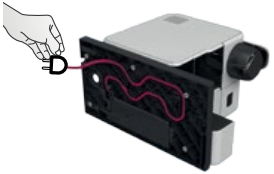

2. Remove the water tank, drip tray, and capsule container. Adjust the cable length and store the excess in the cable guide under the machine.



3. Put the machine in upright position, plug machine into mains.

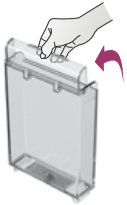

4. The water tank can be carried by its cover.

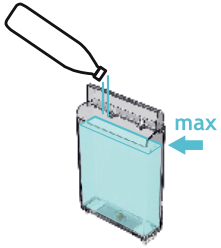

5. Rinse the water tank before filling with potable water up to maximum level.

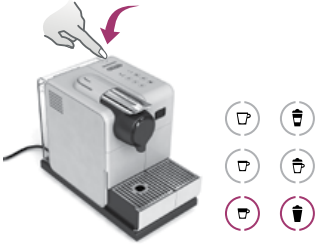

6. Switch the machine on. For the first 2 seconds, the automatic power off and water hardness setting are indicated with steady light.

FIRST USE OR AFTER A LONG PERIOD OF NON-USE

How to read automatic power off and water hardness settings:

Automatic power off, refer to page 25

- Lungo for 8 h
- Espresso for 30 min
- Ristretto 9 min

Water hardness settings, refer to page 23

- Latte Macchiato: level 0/
- Cappuccino: level 1
- Warm milk froth: level 2
- Warm milk froth + Latte Macchiato: level 3
- Warm milk froth + Cappuccino: level 4

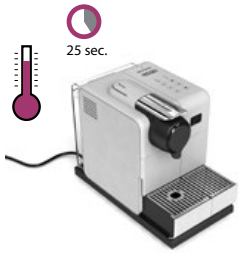

After the first 2 seconds, the machine heats up for approximately 25 seconds (blinking lights). Machine ready is indicated by steady lights.

7. Rinsing: place a container under coffee outlet and press the lungo button. Repeat three times.

INFORMATION: machines are fully tested after being produced. Some traces of coffee powder could be found in rinsing water.

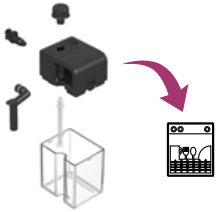

8. Disassemble the Rapid Cappuccino System (R.C.S.) and clean all 6 components in the upper level of your dishwasher. In case a dishwasher is not available, refer to section Hand washing of Rapid Cappuccino System (R.C.S.).

INFORMATION: refer to section Assembling/Disassembling of Rapid Cappuccino System, on page 12.

EN COFFEE PREPARATION

NOTE: during heat up, you can press any coffee buttons. The coffee will then flow automatically when the machine is ready.

1. Lift the lever completely and insert the capsule.

2. Close the lever and place a cup under the coffee outlet.

3. Press the Ristretto (25 ml), the Espresso (40 ml) or the Lungo (110 ml) button. Preparation will stop automatically. To stop the coffee flow or top up your coffee, press again.

4. Take the cup. Lift and close the lever to eject the capsule into the used capsule container.

ASSEMBLING/DISASSEMBLING OF RAPID CAPPUCCINO SYSTEM (R.C.S.)/

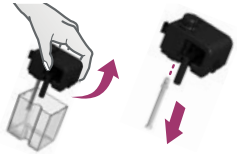

1. Remove the milk container lid and unplug milk aspiration tube.

2. Remove the milk froth regulator knob by turning it until and pulling it up.

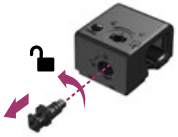

3. Remove Rapid Cappuccino System connector by unlocking it from to and pulling it off.

4. Remove the milk spout by pulling it off.

PREPARING CAPPUCCINO - LATTE MACCHIATO - WARM MILK FROTH

INFORMATION: for a perfect milk froth, use skimmed or semi-skimmed milk at refrigerator temperature (about 4° C).

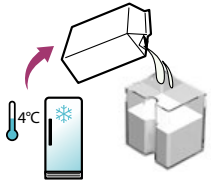

1. Fill the milk container with desired quantity of milk.

INFORMATION: when the milk container is empty, before refilling, thoroughly rinse it and the milk aspiration tube with potable water.

2. Close the milk container.

3. Open the steam connector door by sliding it to the right.

4. Connect the Rapid Cappuccino System to the machine.

5. Machine heats up for approximately 15 seconds (blinking lights).

6. Lift the lever completely and insert the capsule.

INFORMATION: only for Cappuccino or Latte Macchiato. Skip this step when preparing a Warm milk froth only.

PREPARING CAPPUCCINO -LATTE MACCHIATO - WARM MILK FROTH

7. Close the lever, place a Cappuccino cup or a Latte Macchiato glass under the coffee outlet and adjust milk spout position by lifting it up to the right level.

8. Adjust the milk froth regulator knob according to the volume of froth you want.

INFORMATION: recommended settings: Cappuccino min/Macchiato max.

NOTE: do not overturn the milk froth regulator. Overturned position is for inserting/ removing dial for cleaning.

9. Press the Cappuccino or Macchiato button or Warm milk froth.

INFORMATION: for cappuccino or Latte Macchiato, the preparation starts after a few seconds (first milk and then coffee) and will stop automatically. For Warm milk froth, only milk froth will be prepared.

10. At the end of the preparation, the CLEAN ☆ shines orange.

INFORMATION: rinse the milk system after each use.

11. Lift and close the lever to eject the capsule into the used capsule container. Place a container under milk spout.

12. Press and hold the «CLEAN» ☆ button until machine stops pumping automatically. Rinsing process lasts approximately 16 seconds. «CLEAN» ☆ blinks. Milk system rinsing process starts and hot water combined with steam flows through the milk spout.

13. When the rinsing process is finished, the «CLEAN» ☆ alert is resumed.

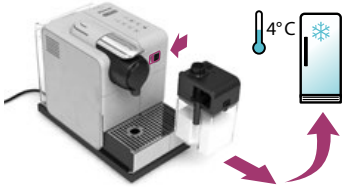

14. Disconnect the R.C.S. from machine and place it immediately in the refrigerator. Close the machine steam connector door.

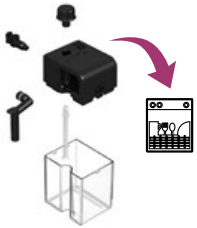

15. Every two days, disassemble the Rapid Cappuccino System, and clean all components in the upper side of your dishwasher. In case a dishwasher is not available, refer to section Hand washing of Rapid Cappuccino System (R.C.S.).

ⓘ **INFORMATION:** refer to section «Assembling/ Disassembling of Rapid Cappuccino system (R.C.S.)».

⚠ **CAUTION:** this milk should not be kept for more than 2 days in the refrigerator. In the case the milk container is kept outside refrigerator for longer than 2 hours, disassemble the R.C.S. and clean all components (refer to dishwashing or hand washing recommendations).

EN PROGRAMMING COFFEE QUANTITY

INFORMATION: follow the step 1-2 of section «coffee preparation».

NOTE: please refer to factory settings section for min/max programmable quantities.

1. Touch and hold Ristretto, Espresso or Lungo button for at least 3 sec to enter the programming mode. Brewing starts. Button blinks fast: programming mode.

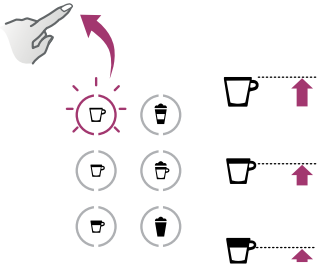

2. Release button when desired volume is reached.

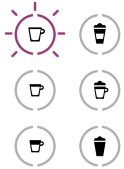

3. Water volume is now stored for the next coffee preparations. Button blinks 3 times to confirm the new water volume.

PROGRAMMING QUANTITY FOR CAPPUCCINO - LATTE MACCHIATO - WARM MILK FROTH

EN

INFORMATION: follow the steps 1-8 of section «Preparing Cappuccino and Latte Macchiato».

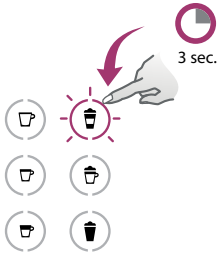

1. Touch and hold Cappuccino/ Latte Macchiato/ Warm milk froth button for at least 3 sec. Milk frothing starts. Button blinks fast: programming mode.

NOTE: please refer to «Factory settings» section for min/max programmable quantities.

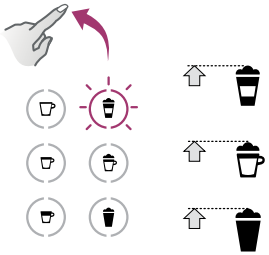

2. Release button when desired milk froth volume is reached. Button still blinks fast: programming mode. (Cappuccino/Latte Macchiato). When programming the Warm milk froth beverage, the programming ends here.

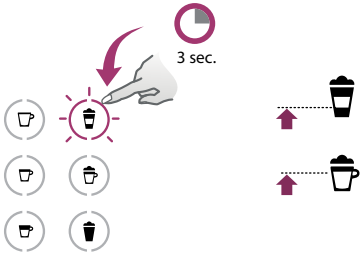

3. Touch and hold the same button. Brewing starts. Release button when desired coffee volume is reached. Recipe volume is now stored for the next preparations. Button blinks 3 times to confirm the new water volume.

NOTE: the milk froth volume depends on the kind of milk that is used, its temperature and the position of the milk regulator knob.

DAILY CARE

INFORMATION: do not use any strong cleaning agent or solvent cleaner. Use a clean damp cloth and mild cleaning agent to clean the surface of the machine. Do not put any machine components in dishwasher, except the Rapid Cappuccino System components.

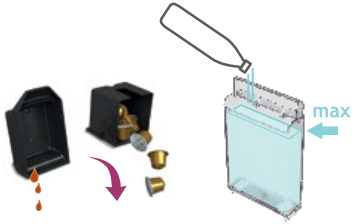

1. Remove drip tray, capsule container. Empty and rinse. Remove water tank. Empty, rinse it before filling with fresh potable water.

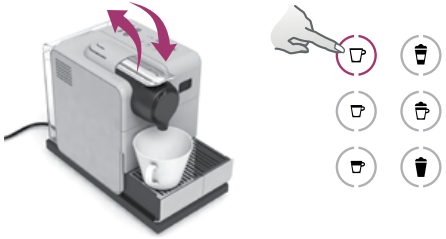

2. Lift and close the lever to eject the capsule into the used capsule container. Place a container under coffee outlet and press the Lungo button to rinse.

3. Clean the coffee outlet with a clean damp cloth. Clean the machine surface using a clean damp cloth.

HAND WASHING OF RAPID CAPPUCCINO SYSTEM (R.C.S.)

INFORMATION: when a dishwasher is not available, the R.C.S. components can be washed by hand. In that case, the procedure must be performed daily for a maximum efficiency.

EN

1. Disassemble the Rapid Cappuccino System. Refer to section «Assembling/Disassembling of Rapid Cappuccino system (R.C.S.)».

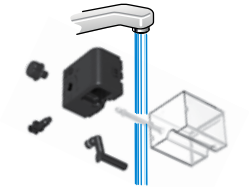

2. Rinse away carefully any milk residue with potable water.

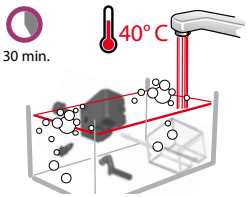

3. Soak all components in warm water (approximately 40° C/104° F) together with soap detergent for at least 30 minutes.

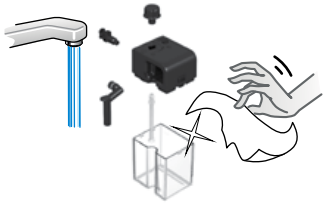

4. Rinse with potable water and dry them with a clean damp cloth.

RESTORING QUANTITY TO FACTORY SETTINGS

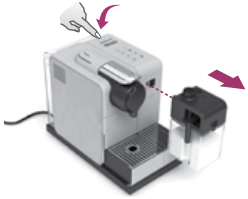

1. Switch the machine ON.

NOTE: remove milk jug.

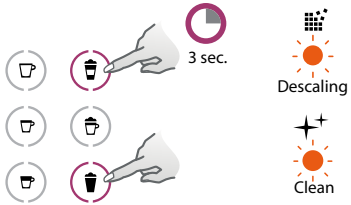

2. Press the Latte Macchiato and Warm milk froth buttons simultaneously for 3 seconds to enter Menu mode: descaling and clean alerts start blinking.

NOTE: the Menu mode exits automatically after 30 sec if no actions are performed or can be exited manually by pressing the Latte Macchiatto and Milk froth buttons simultaneously for 3 seconds.

EN RESTORING QUANTITY TO FACTORY SETTINGS

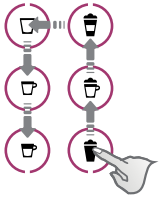

3. Touch in a single continuous movement the following buttons: Milk Froth ->Cappuccino ->Latte Macchiato ->Lungo ->Espresso ->Ristretto.

4. The Warm milk froth button blinks to indicate reset mode. Press it to confirm. All buttons blink 3 times: all volumes are reset.

5. The menu exits automatically and machine returns to ready mode.

FACTORY SETTINGS

⚠ **CAUTION:** if coffee volumes higher than 150 ml are programmed: let the machine cool down for 5 minutes before making the next coffee. Risk of overheating!

- Lungo: 110 ml
- Espresso: 40 ml
- Ristretto: 25 ml
- Latte Macchiato Milk*: 150 ml/Coffee: 40 ml
- Cappuccino Milk*: 50 ml/Coffee: 40 ml
- Warm milk froth*: 120 ml

Water hardness. Level 2

Automatic power off. 9 min

NOTE: we recommend you to keep factory settings for Ristretto, Espresso and Lungo to ensure the best in cup results for each of our coffee varieties.

Milk volume can be programmed from 30 to 200 ml.
Coffee volume can be progammed from 25 to 200 ml.

NOTE: *the milk froth volume depends on the kind of milk that is used, its temperature and the position of the milk regulator knob.

DESCALING ⚠ **CAUTION:** refer to safety precautions.

INFORMATION: descaling time is approximately 25 minutes.

NOTE: to ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day, follow the below process.

1. Descale the machine when descaling alert shines orange in ready mode.

2. Lift and close the lever to eject any capsules in the used capsule container.

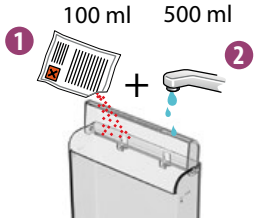

3. Empty the drip tray and the used capsules container. Fill the water tank with 100 ml of *Nespresso* descaling agent and 500 ml water.

4. Open the descaling pipe storage door. Plug the descaling pipe into steam connector of machine.



5. The machine enters the descaling mode. The descaling alert blinks orange during the entire descaling process. The Warm milk froth button shines white.

6. Place a container with a minimum 1 litre capacity under both the coffee outlet and under the descaling pipe nozzle.

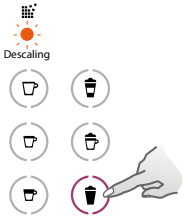

7. Press the Warm milk froth button. Descaling product flows alternately through the coffee outlet, descaling pipe and drip tray.

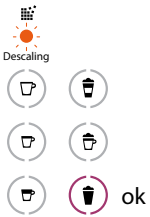

8. When the descaling cycle is finished (water tank runs empty), the Warm milk froth button shines.

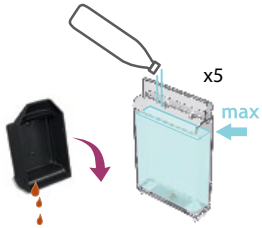

9. Empty the used capsules container, drip tray, rinse out and fill the water tank with fresh potable water up to level MAX.

10. Press the Warm milk froth button again. The rinsing cycle continues through the coffee outlet, descaling pipe and drip tray until the water tank turns empty.

11. Once the rinsing process is finished, the machine switches off. Remove and store descaling pipe. Empty drip tray and used capsules container. Fill water tank with fresh potable water.

12. Clean the machine using a damp cloth. You have now finished descaling the machine.

WATER HARDNESS SETTING

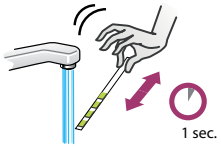

1. Place the water hardness sticker under water for 1 second.

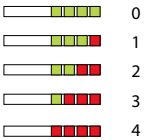

2. The number of red squares indicates the water hardness level.

3. Switch the machine ON.
NOTE: remove milk jug.

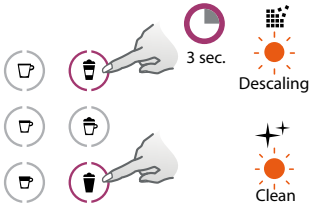

4. Press the Latte Macchiato and Warm milk froth buttons simultaneously for 3 seconds to enter Menu mode: descaling and clean alerts start blinking.

NOTE: the Menu mode exits automatically after 30 sec. if no actions are performed. It can be exit manually by pressing the Latte Macchiatto and Milk froth buttons simultaneously for 3 seconds.

Water hardness table				
	Level	dH	fH	mg/L CaCo3
Latte Macchiato	0	<3	<5	<50
Cappuccino	1	>4	>7	>70
Warm milk froth	2	>7	>13	>130
+ Warm milk froth + Latte Macchiato	3	>14	>25	>250
+ Warm milk froth + Cappuccino	4	>21	>38	>380

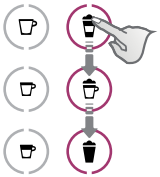

5. Touch in a single continuous movement the following buttons: Latte Macchiato ->Cappuccino ->Milk froth. The current water hardness setting is indicated by the corresponding buttons (steady light).

6. Now, within 15 sec, you can set the desired value by pressing the corresponding button. They blink 3 times rapidly to confirm new value.

7. The menu exits automatically and machine returns to ready mode.

EN EMPTYING THE SYSTEM BEFORE A PERIOD OF NON-USE FOR FROST PROTECTION OR BEFORE A REPAIR

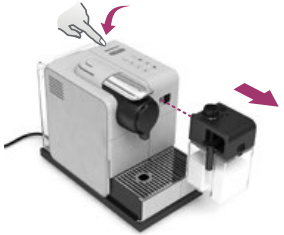

1. Switch ON machine.

NOTE: remove milk jug.

2. Remove the water tank. Lift and close the lever to eject any remaining capsule. Place a container under the coffee outlet.

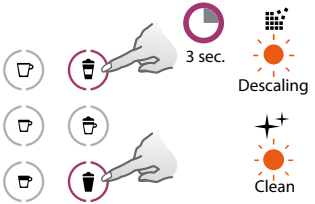

3. Press the Latte Macchiato and Warm milk froth buttons simultaneously for 3 seconds to enter Menu mode: the descaling and clean alerts start blinking.

NOTE: the Menu mode exits automatically after 30 sec if no actions are performed or can be exited manually by pressing the Latte Macchiatto and Milk froth buttons simultaneously for 3 seconds.

4. Touch in a single continuous movement the following buttons: Cappuccino -> Espresso.

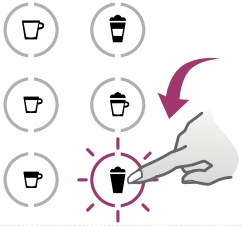

5. The Warm milk froth button blinks for confirmation. Once pressed, the emptying starts. The coffee buttons blink alternately: emptying mode in progress.

6. When the process is finished, the machine switches off automatically.

NOTE: appliance will be blocked for approximately 10 minutes after emptying.

AUTOMATIC POWER OFF

EN

INFORMATION: this machine is equipped with an excellent energy consumption profile as well as an automatic power off function (0W) which enables you to save energy.
The appliance switches off after 9 minutes after last use. (factory settings).

1. Switch machine ON.
NOTE: remove milk jug.

2. Press the Latte Macchiato and Warm milk froth buttons simultaneously for 3 seconds to enter Menu mode: the descaling and clean alerts start blinking.

NOTE: the Menu mode exits automatically after 30 sec if no actions are performed or can be exited manually by pressing the Latte Macchiatto and Milk froth buttons simultaneously for 3 seconds.

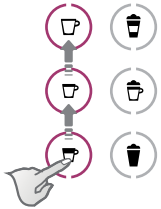

3. Touch in a single continuous movement the following buttons: Ristretto ->Espresso ->Lungo.
The current automatic power off setting is indicated by the corresponding buttons (steady light).

Automatic power off/	
Lungo	8h
Espresso	30 min.
Ristretto	9 min.

4. Now, within 15 sec, you can set the desired value by pressing the corresponding button. They blinks 3 times rapidly to confirm new value.

5. The menu exits automatically and machine returns to ready mode.

TROUBLESHOOTING

No light indicator.	➔ Check the mains, plug, voltage, and fuse. In case of problems, call the *Nespresso* Club.
No coffee, no water.	➔ Water tank is empty. Fill water tank. ➔ Descale if necessary; see Descaling section.
Coffee comes out very slowly.	➔ Flow speed depends on the coffee variety. ➔ Descale if necessary; see Descaling section.
No coffee, just water runs out (despite inserted capsule).	➔ In case of problems, send appliance to repair or call the *Nespresso* Club.
Coffee is not hot enough.	➔ Preheat cup. ➔ Descale if necessary; see Descaling section.
Capsule area is leaking (water in capsule container).	➔ Position capsule correctly. If leakages occur, call the *Nespresso* Club.
Irregular blinking.	➔ Send appliance to repair or call the *Nespresso* Club.
All buttons blink simultaneously for 10 seconds and then machine switches off automatically.	➔ Error alarm, machine needs repair. Send appliance to repair or call the N*espresso* Club.
All 6 buttons blinking fast 3 times and then machine goes back in ready mode.	➔ Water tank is empty.
Descaling and cleaning alert blink.	➔ Machine is in menu mode, press simultaneously Latte Macchiato and milk froth button for 3 seconds to exit menu mode or wait 30 seconds to exit automatically .
Descaling alert shines orange and beverage buttons available (descaling alert level 1).	➔ Machine triggers descaling alert according beverages consumption usage. Descale machine.
Descaling alert blinks orange and beverage buttons available (descaling alert level 2).	➔ Descaling process not done correctly. Descale machine.
Descaling alert blinks orange and Warm milk froth steady light.	➔ Machine is in Descaling mode. Press Warm milk froth button to start descaling process.
Descaling alert shines orange, beverage buttons are unavailable (descaling alert level 3).	➔ Machine blocked due to scale level too high. Descale machine.
Clean alert shine orange.	➔ Rinse Milk system.
All coffee buttons and all milk recipe buttons flash alternatively.	➔ Machine overheat, wait until machine cools down. ➔ Appliance will be blocked for approximately 10 minutes after emptying.
Lever cannot be closed completely.	➔ Empty capsule container. Make sure that no capsule is blocked inside the capsule container.
Quality of Milk froth is not up to standard.	➔ Use skimmed or semi-skimmed milk at refrigerator temperature (about 4° C/39.2° F). ➔ Rinse after each milk preparations (see p.Hand Washing R.C.S.). ➔ Descale the machine (see. p.24). ➔ Do not use frozen milk.
I cannot enter Menu mode.	➔ Be sure to remove the milk jug. ➔ Be sure to press Latte Macchiatto and Milk froth button for 3 seconds. ➔ Remove descaling pipe.

SPECIFICATIONS

LATTISSIMA TOUCH

	JP: 100 V, 50-60 HZ, 1300 W
P_{max}	**Max/19 bar**
	~ 4.5 kg
	0.9 L
	0.35 L
	17.3 cm **25.8 cm** **32 cm**

DISPOSAL AND ECOLOGICAL CONCERNS

Disposal and Environmental Protection

Your appliance contains valuable materials that can be recovered or recycled. Separation of the remaining waste materials into different types facilitates the recycling of valuable raw material.
You can obtain information on disposal from your local authorities.

CONTACT THE *NESPRESSO* CLUB

For any additional information, in case of problems or simply to seek advise, call the *Nespresso* Club.
Contact details of the *Nespresso* Club can be found in the «Welcome to *Nespresso*» folder in your machine box or at nespresso.com

WARRANTY

Nespresso guarantees this product against defects in materials and workmanship for a period of 2 years. The warranty period begins on the date of purchase and *Nespresso* requires presentation of the original proof of purchase to ascertain the date. During the warranty period, *Nespresso* will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products or repaired parts will be warranted only for the unexpired portion of the original warranty or six months, whichever is greater. This limited warranty does not apply to any defect resulting from negligence, accident, misuse, or any other reason beyond *Nespresso*'s reasonable control, including but not limited to: normal wear and tear, negligence or failure to follow the product instructions, improper or inadequate maintenance, calcium deposits or descaling, connection to improper power supply, unauthorized product modification or repair, use for commercial purposes, fire, lightning, flood or other external causes. This warranty is valid only in the country of purchase or in such other countries where *Nespresso* sells and services the same model with identical technical specifications. Warranty service outside the country of purchase is limited to the terms and conditions of the corresponding warranty in the country of service. Should the cost of repairs or replacement not be covered by this warranty, *Nespresso* will advise the owner and the cost shall be charged to the owner. This limited warranty shall be the full extent of *Nespresso*'s liability however caused. Except to the extent allowed by applicable law, the terms of this limited warranty do not exclude, restrict or modify the mandatory statutory rights applicable to the sale of this product and are in addition to those rights. The limited warranty applies only to this single-branded *Nespresso* products. Products marked with both the *Nespresso* Brand and another producer are governed exclusively by the warranty provided by that other producer. If you believe your product is defective, contact *Nespresso* for instructions on how to proceed with a repair. Any defect or dysfunction resulting from the use of non-genuine *Nespresso* capsules will be not covered by this warranty.
Please visit our website at www.nespresso.com for contact details.

ネスプレッソ コーヒーメーカーはすべて、最大19気圧で働く独自の抽出システムを採用しています。グラン・クリュのそれぞれの個性豊かなアロマが抽出され、しっかりしたボディ、深い味わい、そしてなめらかなクレマが生まれるよう設計されています。

●取扱説明書をよくお読みのうえ、正しく安全にお使いください。
●ご使用前に**「安全上の注意」(30〜31ページ)を必ずお読みください。**
●保証書は、「お買い上げ日・販売店名」などの記入を確かめ、取扱説明書とともに大切に保管してください。

もくじ

付属品 29
安全上の注意 30
各部のなまえ 32
はじめてお使いになる前に、また長期間ご使用にならなかったときに 34
コーヒーを抽出する 36
ミルクタンクの分解と組み立て 36
カプチーノ、ラテ・マッキャート、ホットミルクをつくる 37
コーヒー抽出量の設定 40
カプチーノ、ラテ・マッキャート、ホットミルクの量の設定 41
毎日のお手入れ 42
ミルクタンクのお手入れ 43
抽出量を初期設定値に戻す 43
初期設定（工場出荷時の設定） 44
湯垢洗浄 45
水の硬度設定 47
乾燥モード 48
自動電源オフ 49
故障かな？と思ったら 50
保証について 51
ネスプレッソクラブ 51

付属品

水硬度チェッカー
（P.47の水の硬度設定のときに使用します。水硬度チェッカーは本取扱説明書に1枚挟み込まれています。）

取扱説明書
（水硬度チェッカーが入っています）

グラン・クリュお試しカプセルキット
（カプセル16個入り）

スターターパック
（各種カタログが入っています）

保証書
※保証書は、「お買い上げ日・販売店名」などの記入を確かめ、取扱説明書とともに大切に保管してください。

仕様 家庭用

品名	コーヒーメーカー
機種名	ラティシマ・タッチ
型名	F511
電源	交流100V　50／60Hz
定格消費電力	1300W
ポンプ最大圧力	19気圧
重量(約)	4.8kg
水タンク容量(約)	0.95L
ミルクタンク容量(約)	0.4L
大きさ(約)	W17.3×D25.9×H25.9 (cm)

- 特定地域（高地、厳寒地など）では、所定の性能が確保できないことがあります。
- この製品には、ミルおよび保温機能はありません。
- 冬場などは置き場所にご注意ください。本体内部に残った水が凍結して、部品を損傷することがあります。
- 凍結が予想される場所では、凍結による故障を防ぐために使用後に乾燥モードを行ってください。
- この製品には、日本国内用に設計されています。電源電圧や電源周波数の異なる海外では使用できません。
- ネスプレッソは信頼性や性能の向上、法令の変更などを理由として、このモデルまたは将来の製品の改良、仕様変更を予告無く行うことがあります。
- 補修用性能部品の保有期間は、製造中止後5年間です。

JP

安全上の注意

（必ずお守りください）

この取扱説明書は大切に保管し、必要なときにお読みください。

ここに示した注意事項は、この電気器具を安全に正しくお使いいただき、ご自身や他の人々への危害や、財産への損害を未然に防止するためのものです。注意事項を「警告」と「注意」に区別して明示していますので、お使いの際には、必ず守ってください。

この取扱説明書、別添の保証書ならびに購入日がわかる書類（レシート等）は保管し、次に製品を使用する方には必ずお渡しください。

不適切な使用によって生じた損害について当社は責任を負いません。

警告

この警告に従わずに、誤った取り扱いをすると、人が死亡または重症を負う可能性が想定される内容を示しています。

注意

この注意に従わずに、誤った取り扱いをすると、人が傷害を負う可能性が想定される内容、または物的損害の発生が想定される内容を示しています。

絵表示の例

次の記号は、注意（警告を含む）を促す内容があることをお知らせするためのものです。

一般的注意

高温注意

感電注意

指のケガに注意

次の記号は禁止の行為であることをお知らせする物です

してはいけない　禁止

分解禁止

風呂場、シャワー室での使用禁止

水ぬれ禁止

ぬれ手禁止

次の記号は、行為を強制したり、指示する内容をお知らせするものです。

一般指示　指示に従う

電源プラグを抜く

警告

（やけど、怪我、火災を防ぐために）

・本体付属の電源コードを使用し、電源プラグを壁面の電源コンセントに確実に差し込む。

・コンセントの定格内で、単独使用する。（たこ足配線などで定格値を超えると、発熱による火災の原因になります）

・電源コードは本体の設置が終わってからコンセントに差し込む。

- 取扱説明書に従って取り扱うことのできない方、子供など取り扱いに不慣れな方だけでは使用、手入れ、清掃などをしない。また幼児の手の届くところで使わない。子供のおもちゃにしない。
- コーヒーカプセルを挿入および排出するとき以外は開閉レバーを下げてカプセル挿入口を閉じた状態にしておくこと。また、やけどのおそれがあるので、抽出中に絶対開閉レバーを上げない。
- コーヒーメーカーの熱くなる部分、その他熱源、またとがった場所に、電源コードを近づけない。
- 傷ついた電源コードを使用しない。電源コードを傷つけない。
- 電源コードに傷を発見したら、ネスプレッソクラブに修理をご相談ください。
- 延長コードは使用しない。
- 動作中にそばを離れない。
- ケガや損傷の原因になるので、ネスプレッソ純正の部品以外使用しない。
- 排水グリッドをおよび排水受け皿を取り外した状態で使用しない。
- このコーヒーメーカーは 100V 50/60Hz 専用です。
- このコーヒーメーカーは日本国内、屋内専用です。屋外では使用しない。
- コーヒーメーカーを破損から守る為に暖房装置、コンロ、オーブン、ガスバーナー、炭火焼コンロ、その他の熱源の側に設置しない。
- コーヒーメーカーを破損した状態で使用しない。異常を感じたら、使用を中止しネスプレッソクラブにご相談ください。

コーヒーメーカー、電源コード、電源プラグを決して水につけない。また、これらに水をかけない。水しぶきがかかるところに設置しない。

子供に電源コードを触らせない。

コーヒー抽出口の下やミルクノズルの近くに手や指を近づけない。やけどのおそれがある。

JP

カプセルが本体内部で詰まった場合には自分で修理しないで、ネスプレッソクラブにご相談ください。

電源プラグにぬれた手でさわらない。

コーヒーメーカーのすきまにものを差し込まない。感電のおそれがあります。

- コーヒーメーカーに異常発熱、異音、発煙などの異常を感じたら、速やかに電源プラグを抜く。
- 破損や故障した状態で使用しない。電源プラグを抜く。

分解、修理、改造を行わない。
（修理はネスプレッソクラブにご相談ください）

注意

長期間使用しない場合は電源プラグを抜く。清掃、点検の前には必ず電源プラグを抜く。電源コードを引っ張って電源プラグを抜かない。

取扱説明書に準じた日常の清掃点検以外の点検修理は自分で行わない。次の場合の故障は保証の対象外になります。

－このコーヒーメーカー以外に起因する事故
－使用上の過失によるもの
－取扱説明書に沿わない使用をした場合
－表示された電圧、周波数、電源以外を使用した場合
－ネスプレッソの指定工場以外で修理した場合
－自然損耗、経年劣化
－火災
－地震、津波、噴火、落雷などの自然災害によるもの
－屋外で使用されたもの

著しく変形したカプセルは使用しない。故障の原因になります。

ネスプレッソが販売するネスプレッソコーヒーカプセル以外は使用しない。故障や不具合の原因になります。

- 交換部品などはネスプレッソ純正部品以外使用しない。

•毎日使用する前に試運転を行い、動作に異常が無いか確認する。
•水タンクには水道水あるいは浄水器を通した新鮮な水以外入れない。湯は入れない。
•水タンクの水は常に新しいものを使用すること。水が腐敗します。少なくとも1日1回タンクの水を取り替える。
•2日以上使用しない場合には水タンクを空にする。
•コーヒーメーカーは、コーヒー、水、湯垢洗浄剤などにぬれても問題のない場所、かつ熱や振動に強い場所に設置してください。

正しくお使いいただくために

この製品は、取扱説明書に従って飲料を作るためのものです。その他の目的で使用したり、間違った操作をしたり、ネスプレッソの指定工場以外で修理した場合に起きる損傷については弊社は責任を負いません。またその場合には保証の対象外になります。

湯垢洗浄

• 取り扱い注意

ディスケーリング（湯垢洗浄）剤は必ずネスプレッソ純正の製品をご使用の上、お取り扱いには十分ご注意ください。他の薬剤をお使いになると故障の原因や、怪我の原因になります。
ディスケーリング剤や溶液が目に入った場合は、こすらず清潔な水でよくすすいで医師にご相談ください。皮膚に付いた場合は、よく洗い流してください。家具、建具、床などに付着した場合は速やかに拭きとって、必要な場合にはそれぞれに適した方法で追加の拭き取りなどを行ってください。
ご不明な点はネスプレッソまでお問い合わせください。

- 湯垢洗浄剤に添付されている安全のための注意書きをよくお読みください。

• 湯垢洗浄中には、コーヒーの抽出はできません。
• 湯垢洗浄剤が残らないように、水タンクとコーヒーメーカーのすすぎは確実に行ってください。

一般ご家庭用製品です

このコーヒーメーカーは家庭用あるいは家庭に類似した環境（小規模なオフィスおよび休憩室など）で使用するために設計・製造されています。業務用には使用できません。

設置および輸送について

- 製品を箱から出したら、まずドリップトレーなどに貼り付けてある保護用フィルムをはがしてください。その際、排水グリッドの縁などで、指を傷つけないようご注意ください。
- 直射日光の当たる場所や高温の場所に設置しない。
- このコーヒーメーカーは家庭の屋内用です。水平で安定した場所に設置してご使用ください。自動車（キャンピングカーなどを含む）、船舶、航空機にて設置・使用できません。頻繁な搬送はせず、輸送する場合には、排水受け皿、カプセルコンテナを空にし、本体内部を乾燥させ（P.48 の「乾燥モード」参照）、購入時に付属の個装箱に緩衝材と共に格納してから行ってください。

このコーヒーメーカーは、ネスプレッソより販売しているネスプレッソカプセル専用です。

この取扱説明書は必要なときにいつでも見ることが出来るように保管してください。

コーヒーメーカーを譲り渡す際には、この取扱説明書および別添の保証書もお渡しください。

JP 各部のなまえ

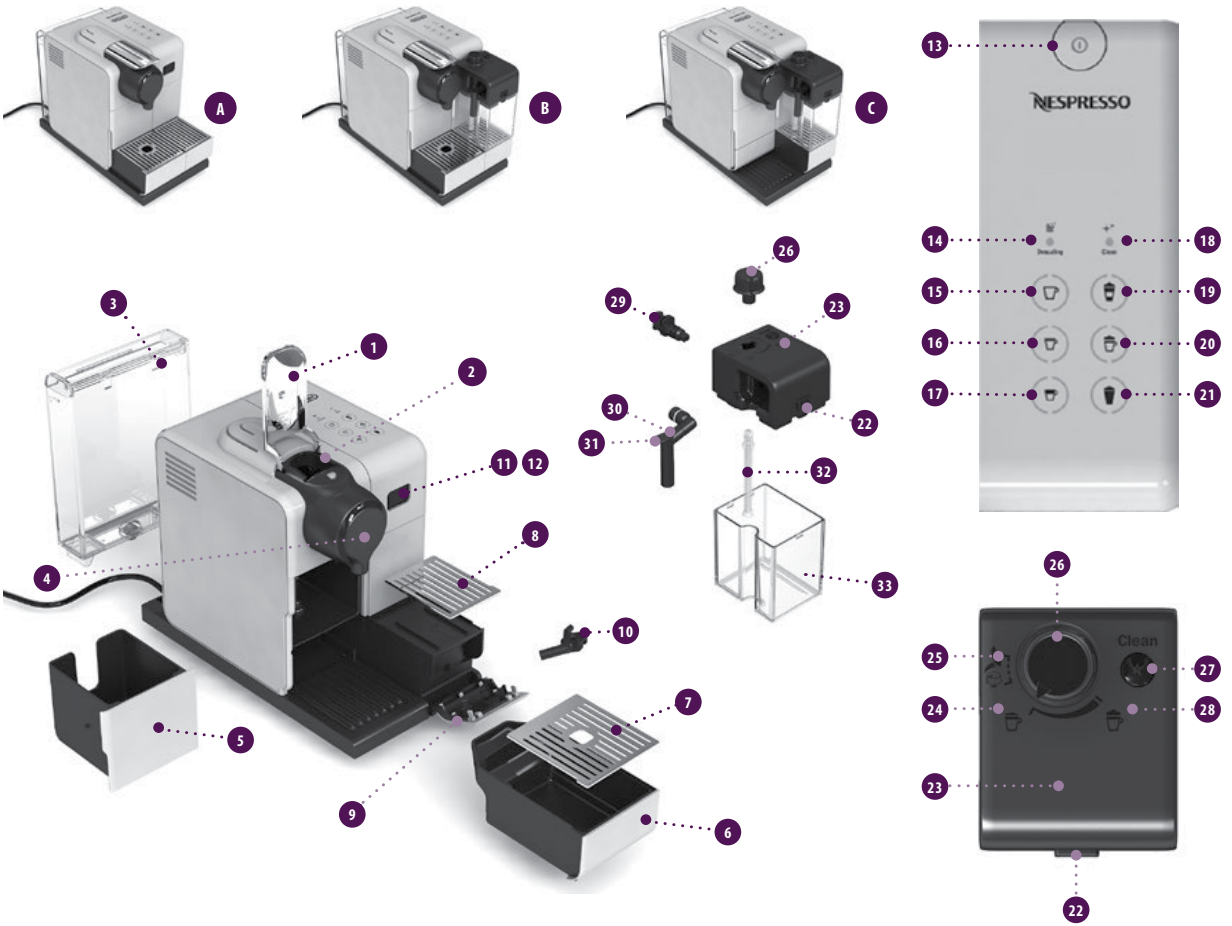

各部のなまえ（つづき）

各部のなまえ

Ⓐ コーヒーメーカー本体（ミルクタンクを外した状態）
Ⓑ コーヒーメーカー本体（カプチーノ抽出時）
Ⓒ コーヒーメーカー本体（ラテ・マッキャート抽出時）
❶ 開閉レバー
❷ カプセル投入口
❸ 水タンク（0.95L）
❹ コーヒー抽出口
❺ カプセルコンテナ
❻ 排水受け皿（高めのカップを使用する際には、内側に押してください）
❼ 左側グリッド
❽ 右側グリッド
❾ 湯垢洗浄用パイプ収納部ふた（手前に引くと開きます）
❿ 湯垢洗浄用パイプ
⓫ ミルクタンク接続部カバー
⓬ ミルクタンク接続部

操作部

⓭ 電源スイッチ
⓯ ルンゴボタン（約110ml）
⓰ エスプレッソボタン（約40ml）
⓱ リストレットボタン（約25ml）
⓳ ラテ・マッキャートボタン
⓴ カプチーノボタン
㉑ ホットミルクボタン

お知らせランプ

⓮ Descaling ランプ:湯垢洗浄お知らせランプ。P.45「湯垢洗浄」をご参照ください。
⓲ Clean ☆ ランプ:ミルクタンク洗浄お知らせランプ。P.39「カプチーノ、ラテ・マッキャート、ホットミルクをつくる」をご参照ください。

ミルクタンク

㉒ ふた取り外しボタン
㉓ ミルクタンクふた
㉔ ミルクの泡立ち具合：少ない
㉕ ミルク泡立ち調整ダイヤル取り外し／取り付け位置
㉖ ミルク泡立ち調整ダイヤル
㉗ Clean ☆ ボタン：ミルクタンク洗浄ボタン
㉘ ミルクの泡立ち具合：多い
㉙ ミルクタンクコネクター
㉚ ミルクノズル
㉛ ミルクノズルつまみ
㉜ ミルク吸い上げパイプ
㉝ ミルクタンク（容量：約0.4L）

JP はじめてお使いになる前に、また長期間ご使用にならなかったときに

1.はじめてお使いになる場合は、右側グリッド、左側グリッドのフィルムをはがしてください。

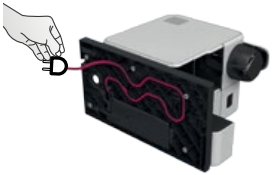

2.水タンク、排水受け皿、カプセルコンテナを取り外してください。電源コードの長さは、本体の底面にあるガイドで調節できます。



3.電源プラグを壁面のコンセントにしっかり差し込んでください。

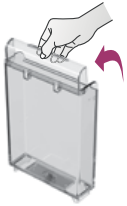

4.水タンクの、ふたを開けます。

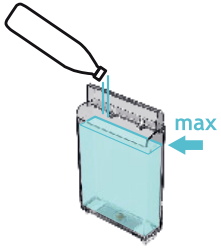

5.水タンクを洗浄して、最大水量目盛（maxのライン）まで水を入れてください。
水タンクを本体背面にセットしてください。

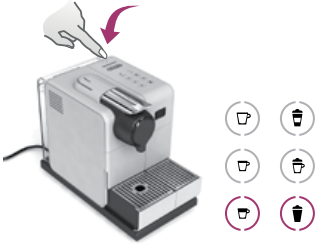

6.電源スイッチを押して電源を入れてください。はじめの2秒間は現在の「自動電源オフ」および「水硬度」の設定状態が表示されます。
（詳細は次のページをご参照ください。）

「自動電源オフ」および「水硬度」の設定の確認方法

自動電源オフ設定の確認（詳細は49ページをご参照ください）

- ルンゴボタンの点灯：8時間
- エスプレッソボタンの点灯：30分間
- リストレットボタンの点灯：9分間

※左のイラストは、自動電源オフが「9分間」に設定されている場合の表示例です。

水硬度設定の確認（詳細は47ページをご参照ください）

- ラテ・マッキャートボタン：硬度レベル1
- カプチーノボタン：硬度レベル2
- ホットミルクボタン：硬度レベル3
- ホットミルクボタン+ラテ・マッキャートボタン：硬度レベル4
- ホットミルクボタン+カプチーノボタン：硬度レベル5

※左のイラストは、硬度レベルが「3」に設定されている場合の表示例です。

各設定状態の表示後、約30秒間で予熱が完了します（予熱中はボタンが点滅します）。ボタンが点灯に変わると準備完了です。

7.湯通し：コーヒー抽出口の下にカップを置き、ルンゴボタンを押して湯通しをしてください。この操作を3回繰り返してください。
ℹ本コーヒーメーカーは製造後、実際にコーヒーを抽出して動作試験を行うため、はじめて湯通しした場合でも、コーヒーの粉が見つかる場合がございます。

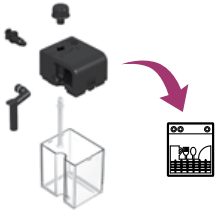

8.ミルクタンクを分解し、全ての部品を予め洗ってください。（食器洗浄機の使用は可能ですが、熱源より遠い場所にセットしてください）食器洗浄機がない場合は、P.43の「ミルクタンクのお手入れ」をご参照ください。
ℹミルクタンクの分解方法は、P.36の「ミルクタンクの分解と組み立て」をご参照ください。

JP コーヒーを抽出する

ⓘ コーヒーメーカーの予熱中でもコーヒー抽出ボタンを押すことができます。そうすると、予熱完了後に自動的にコーヒーが抽出されます。

1.開閉レバーを開けて、カプセルをカプセル投入口に入れます。

2.開閉レバーを閉じて、カップをコーヒー抽出口の下に置きます。

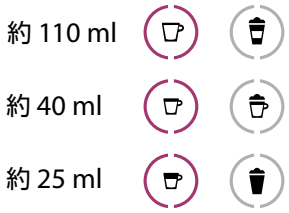

3.リストレット（25ml）／エスプレッソ（40ml）／ルンゴ（110ml）のいずれかのボタンを押してください。コーヒーの抽出が始まり自動的に止まります。

4.コーヒーの抽出を止めたい場合、抽出中にもう一度ボタンを押してください。カップを降ろし、開閉レバーをしっかりと上下させて、使用済みカプセルをカプセルコンテナに落としてください。

ミルクタンクの分解と組み立て

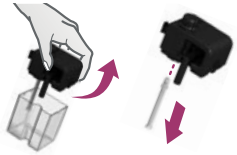

1.ふた取り外しボタンを押しながらミルクタンクふたを外し、ミルク吸い上げパイプを引き抜きます。

2.ミルク泡立て調整ダイヤルを時計回りに回して、外します。

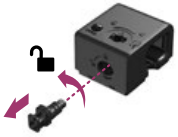

3.ミルクタンクコネクターを反時計回りに回しながら外します。

4.ミルクノズルを図のように外します。

カプチーノ、ラテ·マッキャート、ホットミルクをつくる

JP

ⓘ 牛乳は低脂肪乳、成分無調整牛乳、高脂肪乳のいずれもご使用いただけます。牛乳の脂肪分が高いほどより泡立ちがよくなります。
牛乳の温度は4℃前後をおすすめします。

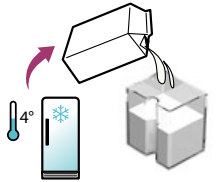

1.ミルクタンクに牛乳を注いでください。(maxのラインを超えないように注意してください) 電源スイッチを押して、マシンの電源を入れてください。

ⓘ ミルクタンクを一度使って空になった場合は、牛乳を補充する前に、一度ミルク吸い上げパイプを水で軽くすすいでください。

2.ミルクタンクふたを閉じてください。

3.ミルクタンク接続部カバーを右にスライドして開けてください。

4.ミルクタンクを本体に取り付けます。

5.約15秒でミルクを使用するのに最適な温度まで予熱します。(ボタンが点滅します)

6.開閉レバーを完全に開き、カプセルをカプセル投入口に入れます。

ⓘ ホットミルクをつくる場合は、手順6は必要ありません。

JP カプチーノ、ラテ·マッキャート、ホットミルクをつくる（つづき）

7.開閉レバーを閉めます。適当な容量のカップをコーヒー抽出口の下に置き、ミルクノズルの角度を調整しカップに向けてください。

ミルク泡立ち調整ダイヤルは、反時計回りに回すと泡立ちが多くなり、時計回りに回すと泡立ちが少なくなります。

8.ミルク泡立ち調整ダイヤルの位置は、お好みで調整してください。

ミルク泡立ち調整ダイヤルを時計回りに回し過ぎると、ダイヤルが外れてしまいますので、ご注意ください。

9.カプチーノ／ラテ·マッキャート／ホットミルクのいずれかのボタンを押してください。

カプチーノとラテ·マッキャート抽出の場合、ボタンを押して2,3秒後に抽出が始まります。最初にミルク、次にコーヒーが抽出され、自動的に止まります。

10. 抽出が終わると、Clean ☆ ランプがオレンジ色に点灯します。

ミルクを使用した後は、毎回ミルクタンクふたのClean ☆ ボタンを押して、洗浄してください。

11.開閉レバーを上下させて、使用済みカプセルをカプセルコンテナに落としてください。空の容器をミルクノズルの下に置いてください。

カプチーノ、ラテ・マッキャート、ホットミルクをつくる（つづき）

12.自動的にミルクタンクの洗浄が終わるまで、Clean ☆ ボタンを押し続けてください。洗浄中はClean ☆ ランプが点滅しミルクの混じった熱湯がミルクノズルから噴出します。

13.洗浄が終わると、Clean ☆ ランプが消灯します。

14.ミルクタンクを本体から取り外し、すぐに冷蔵庫に保管してください。ミルクタンク接続部カバーを閉じてください。

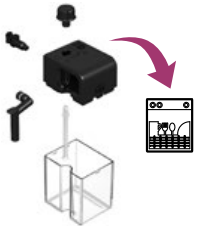

15.2日以上牛乳をミルクタンクで保管するのはおやめください。2日以上経過した場合、ミルクタンク内の牛乳を捨て、ミルクタンクの各パーツを洗浄してください。

P.36の「ミルクタンクの分解と組み立て」をご参照ください。

注意:牛乳が残っている状態では、絶対にミルクタンクを常温で放置しないでください。また、冷蔵庫内でも、2日以上牛乳をミルクタンクで保管するのはおやめください。2日以上経過した場合、ミルクタンク内の牛乳を捨て、ミルクタンクの各パーツを洗浄してください。

JP コーヒー抽出量の設定

ℹ **最初に:**P.36「コーヒーを抽出する」の手順1,2に従い、開閉レバーを開け、カプセルをカプセル投入口に入れた後、開閉レバーを下げてください。
ℹ 設定可能な抽出量の範囲につきましては、P.44「初期設定」を参照ください。.

1.抽出量を設定したいコーヒー抽出ボタン（リストレット／エスプレッソ／ルンゴボタンのいずれか）を3秒以上押し続けてください。コーヒーの抽出が始まり、ボタンの点滅が早くなります。

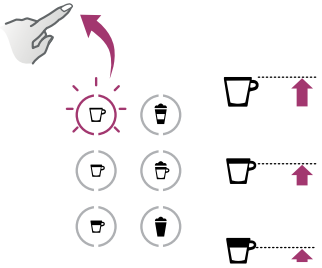

2.お好みの量が抽出されたら、ボタンから指を離してください。
ℹ 設定可能な抽出量の範囲につきましては、P.44「初期設定」をご参照ください。

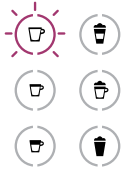

3.コーヒー抽出量の設定が完了しました。ボタンが3回点滅し、抽出量の設定完了をお知らせします。

カプチーノ、ラテ·マッキャート、ホットミルクの量の設定

JP

最初に:P.37「カプチーノ、ラテ·マッキャート、ホットミルクをつくる」の手順1～8に従い、ミルクメニューを作る準備をします。(ホットミルクの量を設定する場合は、カプセルを投入する必要はありません。)

1.量を設定したいボタン(カプチーノ/ラテ·マッキャート/ホットミルクボタンのいずれか)を3秒以上押してください。ミルクノズルからミルクが抽出され、ボタン点滅が早くなります。

設定可能な抽出量の範囲につきましては、P.44「初期設定」をご参照ください。

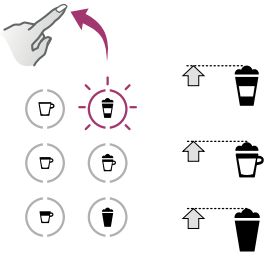

2.お好みのミルクの量が抽出されたら、ボタンから指を離してください。ボタンの点滅は早いままです。ホットミルクの量を設定する場合は、この手順で終了です。カプチーノ/ラテ·マッキャートの場合は、次の手順に進んでください。

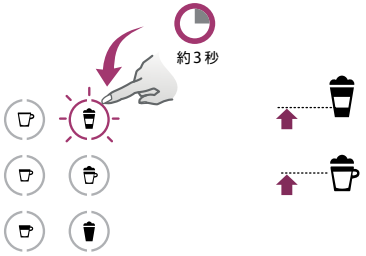

3.次にコーヒーの抽出量を設定します。手順1と同じボタンを押し続けると、コーヒーの抽出が始まります。お好みの量が抽出されたら、ボタンから指を離してください。以上で、抽出量の設定が完了しました。ボタンが3回点滅し、抽出量の設定完了をお知らせします。

ミルクの泡の量や泡立ち具合は、お使いになる牛乳の種類、温度、ミルク泡立ち調整ダイヤルの位置によって変わります。

JP 毎日のお手入れ

注意:
- 強い酸やアルカリ系洗剤、研磨剤の入った洗剤は使用しないでください。
- 強くしぼったやわらかい布で本体を拭いてください。
- ミルクタンク以外の本体および本体部品は、食器洗浄機に入れないでください。
- 本体のお手入れをするときは、電源プラグを抜き、本体が完全に冷めるまでお待ちください。
- 水タンクは、毎日の使用前に新鮮なものに取り換えてください。

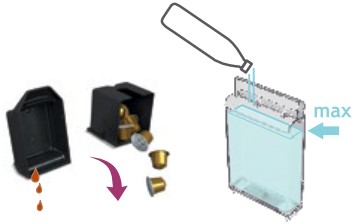

1.排水受け皿およびカプセルコンテナを本体から取り外し、たまっているカプセルおよび水を捨ててください。

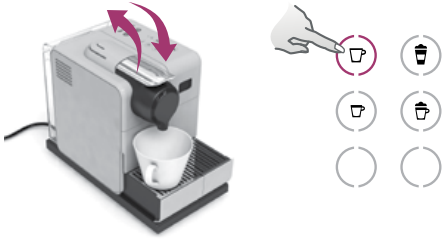

2.水タンクを取り外し、タンク内の水を捨ててください。開閉レバーを上下させて、使用済みカプセルをカプセルコンテナに落としてください。空の容器をコーヒー抽出口の下に置き、ルンゴボタンを押して湯通ししてください。

3.固くしぼった清潔なぬれた布で、コーヒー抽出口を拭いてください。コーヒーメーカー本体の表面も固くしぼった清潔なぬれた布で拭いてください。

ミルクタンクのお手入れ

注意:牛乳が残っている状態では、絶対にミルクタンクを常温で放置しないでください。また、冷蔵庫内でも、2日以上牛乳をミルクタンクで保管するのはおやめください。2日以上経過した場合、ミルクタンク内の牛乳を捨て、ミルクタンクの各パーツを洗浄してください。

ミルクタンクの各パーツは、食器洗浄機で洗うことができます。食器洗浄機を使用する場合は、熱源から離れた場所にセットして洗浄してください。



1.ミルクタンクを分解します。
※ミルクタンクの分解方法は、P.36「ミルクタンクの分解と組み立て」をご参照ください。

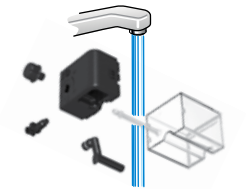

2.残った牛乳を捨てて、水ですすいでください。

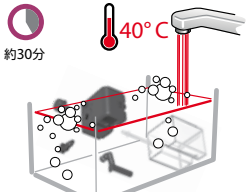

3.約40度のお湯に台所用洗剤を溶かして、約30分間浸します。(つけ洗い)

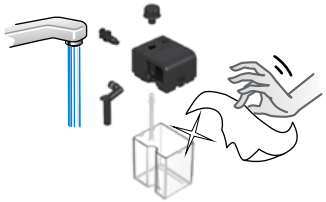

4.水で洗い流し、固くしぼった清潔なぬれた布で拭いてください。

抽出量を初期設定値に戻す

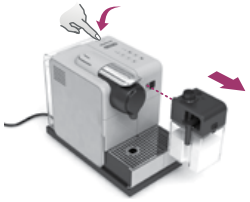

1.電源スイッチを押して、電源を入れます。.
※ミルクタンクは本体から外してください。

2.ラテ・マッキャートボタンとをホットミルクボタンを、同時に3秒以上押すと、Descaling ランプとClean ☆ ランプが点滅し、メニューモードになります。

この状態で30秒間、無操作の状態が続くと、メニューモードが自動的に解除されます。ラテ・マッキャートボタンとホットミルクボタンを、同時に3秒以上押すことでメニューモードを終了させることができます。

JP 抽出量を初期設定値に戻す（つづき）

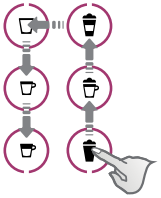

3.各ボタンを次の順に、なぞるようにタッチしてください。ホットミルクボタン→カプチーノボタン→ラテ・マッキャートボタン→ルンゴボタン→エスプレッソボタン→リストレットボタン。（左の図をご参照ください）

4.ホットミルクボタンが点滅したら、ホットミルクボタンを押して初期設定値へのリセットを確定します。すべてのボタンが同時に3回点滅すると、リセットが完了します。

5.自動的にメニューモードが終了します。

初期設定（工場出荷時の設定）

注意:コーヒー抽出量の設定を150ml以上に設定される場合、次のコーヒー抽出まで5分以上間隔をあけてください。（過熱による故障の原因）

ルンゴボタン:約110ml

エスプレッソボタン:約40ml

リストレットボタン:約25ml

ラテ・マッキャートボタン:ミルク約150ml+コーヒー約40ml

カプチーノボタン:ミルク約50ml+コーヒー約40ml

ホットミルク:約120ml

水の硬度レベル：1

自動電源オフ：9分

ネスプレッソのカプセルコーヒーは、ネスプレッソコーヒーメーカーの初期設定抽出量で抽出した際に最適な味わいになるよう設計されているため、各コーヒー抽出ボタン（リストレット／エスプレッソ／ルンゴボタン）の抽出量は、初期設定のままお使いになることをおすすめします。

ミルクの量の設定可能範囲	30ml～200ml
コーヒー抽出量の設定可能範囲	25ml～200ml

湯垢洗浄

JP

注意:・湯垢洗浄剤のパッケージに記載されている、安全のための注意書きをよくお読みください。・酢やクエン酸、他の薬品を使用して湯垢洗浄を行うと、コーヒーメーカーが損傷する可能性があるため、使用しないでください。・湯垢洗浄作業は換気のよい場所で行ってください。

ⓘ 湯垢洗浄の所要時間は、約25分です。
湯垢洗浄中はコーヒーの抽出ができません。

ⓘ 湯垢洗浄剤は、ネスプレッソ純正品をお使いください。湯垢洗浄剤は、ネスプレッソクラブ（P.51）にてお求めいただけます。（品番：3035/CBU-2）

1.湯垢洗浄のタイミングをお知らせするDescaling ランプが点灯したら、湯垢洗浄を行ってください。

2.開閉レバーを上下させて、使用済カプセルをカプセルコンテナに落としてください。

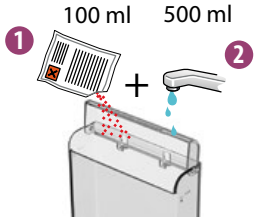

3.排水受け皿とカプセルコンテナを本体から取り外して、空にしてください。湯垢洗浄剤100mlと水500mlを水タンクに入れてください。

4.湯垢洗浄用パイプ収納部ふたを開けてください。湯垢洗浄用パイプをミルクタンク接続部に装着してください。



5.自動的に湯垢洗浄モードに入ります。湯垢洗浄中、Descaling ランプが点滅します。ホットミルクボタンが点灯します。

6.1リットル以上の容量の空の容器を、コーヒー抽出口と湯垢洗浄用パイプの下に置いてください。

JP 湯垢洗浄（つづき）

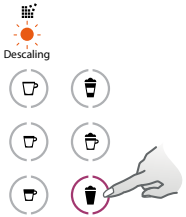

7.ホットミルクボタンを押してください。ホットミルクボタンが消灯し、湯垢洗浄溶液が、コーヒー抽出口と湯垢洗浄用パイプから交互に出てきます。

8.水タンクが空になって湯垢洗浄が終了すると、ホットミルクボタンが再び点灯します。

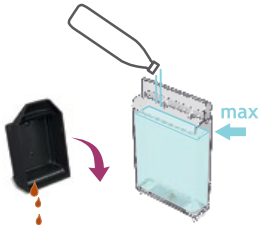

9.湯垢洗浄溶液がたまった容器、カプセルコンテナ、排水受け皿を空にし、水タンクをよく洗って、水をmaxのラインまで入れてください。

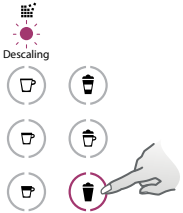

10.ホットミルクボタンを押します。ホットミルクボタンが消灯し、水タンクが空になるまですすぎます。

11.すすぎが終わると、自動的に電源が切れます。湯垢洗浄用パイプを外して、湯垢洗浄用パイプ収納部に収納してください。お湯がたまった容器を下ろし、排水受け皿とカプセルコンテナを空にして、水タンクに水を入れてください。

12.固くしぼった清潔なぬれた布で本体を拭いてください。これで湯垢洗浄完了です。湯垢洗浄剤のにおいが気になる場合は、カプセルをセットせず湯通しを数回行ってください。
ヒント：湯通しの方法は、P.35の「はじめてお使いになる場合、また、長期間お使いにならなかったときに」の手順7をご参照ください。

水の硬度設定

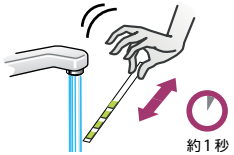

1.普段お使いになる水に水硬度チェッカーを1秒間浸してください。（水硬度チェッカーは取扱説明書に入っています）

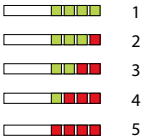

2.上のイラストに表示されている数字が、お使いの水の硬度レベルです。

3.電源スイッチを押し、電源を入れます。
※ミルクタンクは本体から取り外してください。

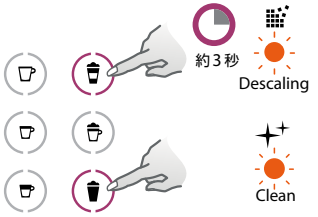

4.ラテ・マッキャートボタンとをホットミルクボタンを、同時に3秒間押して、メニューモードにしてください。Descaling ランプとClean ☆ ランプが点滅します。

ℹ ※この状態で30秒間、無操作の状態が続くと、メニューモードが自動的に解除されます。ラテ・マッキャートボタンとホットミルクボタンを、同時に3秒以上押すことでメニューモードを終了させることができます。

水の硬度レベル対応表				
	水の硬度レベル	dH	fH	mg/L $CaCO_3$
ラテ・マッキャートボタン	1	<3	<5	<50
カプチーノボタン	2	>4	>7	>70
ホットミルクボタン	3	>7	>13	>130
ホットミルクボタン+ラテ・マッキャートボタン	4	>14	>25	>250
ホットミルクボタン+カプチーノボタン	5	>21	>38	>380

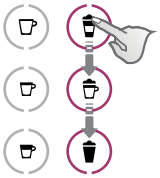

5.各ボタンを次の順に、なぞるようにタッチしてください。ラテ・マッキャートボタン→カプチーノボタン→ホットミルクボタン。現在の水硬度設定値は、各ボタンの点灯のパターンで確認できます。左の表をご参照ください。（初期設定値は硬度レベル1）

6.15秒以内に、手順2で確認した水の硬度レベルに対応するボタン（表の一番左端のボタン）を押すことによって、設定を変更できます。ボタンが3回点滅することによって、新しい数値が設定されたことをお知らせます。

7.メニューモードは自動的に終了します。

JP 乾燥モード(長期間使用しない場合、あるいは寒冷地での凍結による破損防止のために)

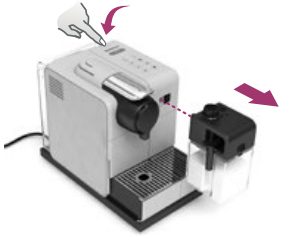

1.電源スイッチを押して、電源を入れてください。
※ミルクタンクを本体から外してください。

2.水タンクを外し、開閉レバーを上下させて、使用済みカプセルをカプセルコンテナに落としてください。コーヒー抽出口の下に、空の容器を置いてください。

3.ラテ・マッキャートボタンとをホットミルクボタンを、同時に3秒間押して、メニューモードにしてください。Descaling ランプとClean ☆ ランプが点滅します。
ℹ この状態で30秒間、無操作の状態が続くと、メニューモードが自動的に解除されます。ラテ・マッキャートボタンとホットミルクボタンを、同時に3秒以上押すことでメニューモードを終了させることができます。

4.各ボタンを次の順に、なぞるようにタッチしてください。カプチーノボタン→エスプレッソボタン

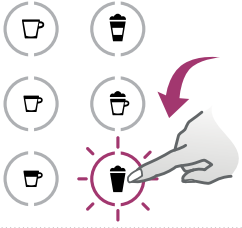

5.ホットミルクボタンが点滅します。ホットミルクボタンを押すと、乾燥モードが始まり、全てのボタンが上から下に流れるように点滅します。
注意：乾燥モード中は、絶対に開閉レバーを開けないでください。(蒸気によるやけどのおそれ)

6.乾燥モードが終了すると、自動的に電源が切れます。
ℹ 乾燥モードでお湯抜きした後は、本体内部が冷めるまで約10分間使用できません。

自動電源オフ

JP

ⓘ 初期設定では、無操作状態が9分間続くとに自動的に電源が切れるようになっています。

1.電源スイッチを押して、電源を入れてください。
※ミルクタンクを本体から外してください。

2.ラテ・マッキャートボタンとをホットミルクボタンを、同時に3秒間押して、メニューモードにしてください。Descaling ランプとClean ☆ ランプが点滅します。

ⓘ この状態で30秒間、無操作の状態が続くと、メニューモードが自動的に解除されます。ラテ・マッキャートボタンとホットミルクボタンを、同時に3秒以上押すことでメニューモードを終了させることができます。

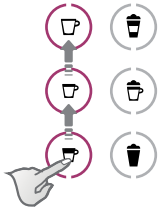

3.各ボタンを次の順に、なぞるようにタッチしてください。リストレットボタン→エスプレッソボタン→ルンゴボタン。
現在の自動電源オフの設定はどのボタンを点灯するのかによって確認できます。左下の表をご参照ください。

自動電源オフまでの時間と対応ボタン	
ルンゴボタン	8時間
エスプレッソボタン	30分
リストレットボタン	9分

4.15秒以内に、左の表に従い、お好みの自動電源オフまでの時間に対応するボタンを押すことで、自動電源オフの設定を変更できます。ボタンが3回点滅することによって、新しい数値が設定されたことをお知らせます。

5.メニューモードは自動的に終了します。

JP 故障かな?と思ったら

ボタンが全く点灯／点滅しない。	➔ ·電源プラグが100Vの電源コンセントにしっかり差し込まれているか確認する。 ·お部屋のブレーカーが落ちていないか確認する。·マシン本体の電源スイッチが入っているか確認する。
コーヒーが抽出されない。お湯／水が出ない。	➔水タンクが空になっていないか確認する。 ➔必要に応じて、湯垢洗浄を行う。P.45「湯垢洗浄」参照。
コーヒーの抽出速度がとても遅い。	➔コーヒーカプセルの種類によって、抽出速度に差があります。 ➔マシン内部の水の通り道に湯垢がたまると、抽出速度が遅くなったり、湯温が低くなる原因となります。長期間湯垢洗浄を行わなかった場合は、湯垢洗浄を行ってください。P.45「湯垢洗浄」参照。
コーヒーカプセルを入れているのに、お湯（水）しか出ない。	➔ネスプレッソクラブまでご連絡ください。連絡先は、P.51に記載しています。
コーヒーがぬるい。	➔カップを事前に温めてください。 ➔マシン内部の水の通り道に湯垢がたまると、抽出速度が遅くなったり、湯温が低くなる原因となります。長期間湯垢洗浄を行わなかった場合は、湯垢洗浄を行ってください。P.45「湯垢洗浄」参照。
排水受け皿に水がたまる。	➔ ·1カプセル使用あたり、排水受け皿に20ml程度のお湯がたまる場合がありますが、マシンの異常ではありません。排水受け皿にたまった水はこまめに捨ててください。·カプセルが、投入口に正しくセットされているか確認する。·ネスプレッソクラブまでご相談ください。連絡先はP.51に記載しています。
不規則なボタン／ランプの点滅。	➔ネスプレッソクラブまでご相談ください。連絡先はP.51に記載しています。
すべてのボタンが同時に10秒間点滅し、自動的に電源が落ちる。	➔修理が必要です。ネスプレッソクラブまでご連絡ください。連絡先はP.51に記載しています。
コーヒー抽出ボタンを押しても、コーヒーが抽出されず、6つのボタンが3回点滅する。	➔水タンクが空です。
Descaling ランプおよびClean ☆ ランプが点滅する。	➔メニューモードの状態です。ラテ·マッキャートボタンとホットミルクボタンを3秒同時に押すとメニューモードを終了させることができます。または、30秒以上無操作の状態が続くと、自動的にメニューモードが終了します。
Descaling ランプがオレンジ色に点灯するが、コーヒーやミルクメニューは抽出することができる状態。（湯垢洗浄の警告レベル1）	➔使用回数に応じてDescaling ランプが点灯します。点灯した場合は、湯垢洗浄を行ってください。P.45「湯垢洗浄」を参照
Descaling ランプがオレンジ色に点滅するが、コーヒーやミルクメニューは抽出することができる状態。（湯垢洗浄の警告レベル2）	➔湯垢洗浄を行ったが正しく完了しませんでした。再度、湯垢洗浄を行ってください。P.45「湯垢洗浄」を参照
Descaling ランプがオレンジ色に点灯しており、コーヒーやミルクメニューを抽出できない。（湯垢洗浄の警告レベル3）	➔湯垢洗浄を行い、正しく終えるまで、コーヒーやミルクメニューの抽出ができません。P.45「湯垢洗浄」を参照
Descaling ランプがオレンジ色に点滅し、ホットミルクボタンが点灯している状態。	➔湯垢洗浄を行っている状態です。ホットミルクボタンを押して、湯垢洗浄を行ってください。P.45「湯垢洗浄」を参照
Clean ☆ ランプがオレンジ色に点灯している。	➔ミルクタンクのClean ☆ ボタンを押して、ミルクノズルを洗浄してください。
左側の3つのボタンと右側の3つのボタンが交互に点滅している。	➔本体内部が過熱状態になっています。冷めるまでお待ちください。 ➔乾燥モードのあと約10分間は使用できません。
開閉レバーを閉じることができない。	➔カプセルコンテナが使用済みカプセルで一杯になっていないか確認する。
ミルクの泡立ちがよくない。	➔牛乳の温度は4℃程度に冷えていなければなりません。 ➔ミルク機能を使用するたびに洗浄しなければなりません。ミルクを使用した後は、一杯ごとにミルクタンクのClean ☆ ボタンを押して、ミルクノズルを洗浄してください。
メニューモードに入れません。	➔ミルクタンクを本体から取り外す。 ➔ラテ·マッキャートボタンとホットミルクボタンを同時に3秒以上押す。 ➔湯垢洗浄用パイプを本体から取り外す。

保証について / LIMITED WARRANTY

JP

日本国内での保証条件については、別添の保証書をご参照ください
Please refer to the warranty card included with your machine.

ネスプレッソが販売するネスプレッソコーヒーカプセル以外の使用による故障は保証の対象外になります。

愛情点検	長年ご使用のコーヒーメーカーの点検を！	
	こんな症状はありませんか ●電源プラグ・コードが異常に熱くなる。 ●コードに傷が付いたり、通電したりしなかったりする。 ●本体が変形したり、異常に熱い。 ●本体から水や蒸気が漏れる。	ご使用中止 事故防止のため、使用を中止し、コンセントから電源プラグを抜いて必ず下記ネスプレッソクラブにご相談ください。

ネスプレッソクラブ

コーヒーメーカーの修理を依頼する場合や、ご使用の際にご不明な点がありましたら、下記ネスプレッソクラブまでお問い合わせください。
また、弊社Webサイト内「FAQ/お問合せ」ページでは、電子メールでのお問い合わせも受けつけています。ネスプレッソクラブの詳細については、コーヒーメーカーに同梱されている「スターターパック」をご参照ください。

●フリーダイヤル番号: 0120-57-3101
●フリーダイヤルファックス番号: 0120-37-0837
●Webサイト(PC版): www.nespresso.com
●FAQ/お問合せページ: 上記Webサイトの「FAQ/お問合せ」をクリック

●Webサイト(モバイル版):
http://m.nespresso.com

●ネスプレッソモバイルアプリ:
www.nespresso.com/mobile/jp/ja/applications

ネスレネスプレッソ株式会社
〒105-0014 東京都港区芝1丁目10番13号
フリーダイヤル 0120-57-3101
フリーダイヤルファックス 0120-37-0837
www.nespresso.com

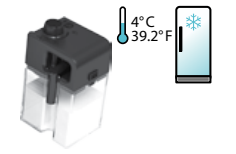

1

2

3

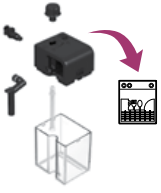

4

EN SPECIAL CARE FOR YOUR RAPID CAPPUCCINO SYSTEM (R.C.S.)

⚠ IMPORTANT: refer to User manual for complete instructions.

1- For a perfect milk froth, use skimmed or semi-skimmed milk at refrigerator temperature (about 4° C / 39.2° F).
2- Rinse after each milk based preparation. Place a recipient under milk outlet, press and hold the «CLEAN» ☆ button.Machine starts rinsing, stops automatically (~16 seconds).
3- Place the milk container in the fridge immediately.
4- Every two days, disassemble the Rapid Cappuccino System and clean all components in the upper level of a dishwasher.

FR ENTRETIEN SPÉCIFIQUE DE VOTRE RAPID CAPPUCCINO SYSTEM (R.C.S.)

⚠ IMPORTANT: veuillez consulter le manuel d'utilisation pour des instructions complètes.

1- Pour une mousse parfaite, utilisez du lait écrémé ou demi-écrémé à température du réfrigérateur (environ 4° C).
2- Rincez après chaque préparation à base de lait.
Placez un récipient sous la buse de lait, appuyez et maintenez appuyée la touche «CLEAN» ☆. La machine commence le rinçage et s'arrête automatiquement (~16sec.).
3- Placez le réservoir à lait immédiatement au réfrigérateur.
4- Tous les deux jours, démontez le Rapid Cappuccino System et lavez tous les composants dans le panier supérieur de votre lave-vaisselle.

DE SPEZIELLE PFLEGE IHRES RAPID CAPPUCCINO SYSTEMS (R.C.S.)

⚠ WICHTIG: Die komplette Anleitung finden Sie in der Bedienungsanleitung.

1- INFORMATION: Für ein ideales Milchschaumergebnis nutzen Sie bitte gekühlte H-Milch (ca. 4° C).
2- Spülen Sie das System nach jeder Milchzubereitung.
Stellen Sie ein Gefäß unter den Milchauslauf und halten Sie die «Reinigung» Taste ☆ gedrückt. Maschine beginnt zu spülen und stoppt automatisch (~16 Sec).
3- Lagern Sie den Milchcontainer immer im Kühlschrank.
4- Zerlegen Sie das Rapid Cappuccino System spätestens alle 2 Tage und reinigen Sie alle Einzelteile im oberen Fach Ihrer Spülmaschine.

IT CURA PARTICOLARE DEL SISTEMA RAPID CAPPUCCINO (R.C.S.)

⚠ IMPORTANTE: vedere il manuale d'uso per le istruzioni complete.

1- Per una schiuma di latte eccezionale, usare il latte scremato o parzialmente scremato a temperatura di frigorifero (circa 4° C).
2- Risciacquare dopo ogni preparazione di ricette a base di latte.
Posizionare un recipiente sotto l'erogatore di latte, premere e tenere premuto il tasto «CLEAN» ☆.
La macchina inizia il risciacquo e si ferma automaticamente (ca. 16 sec.).
3- Posizionare il contenitore del latte nel frigorifero.
4- Ogni due giorni, smontare il sistema Rapid Cappuccino e lavare tutti i componenti nel ripiano superiore della lavastoviglie.

ES MANTENIMIENTO ESPECIAL PARA SU RAPID CAPPUCCINO SYSTEM (R.C.S.)

⚠ IMPORTANTE: Véase el manual de instrucciones para una visión completa.

1- Para preparar una espuma de leche perfecta, utilice leche desnatada o semidesnatada a temperatura de la nevera (4° C).
2- Enjuáguelo después de cada preparación con leche.
Coloque un recipiente debajo de la salida de la leche y pulse el botón de «CLEAN» ☆. La máquina empezará a enjuagar y se detendrá automáticamente (~16 segundos).
3- Coloque el contenedor de la leche en la nevera inmediatamente.
4- Cada dos días, desmonte el Rapid Cappuccino System y lave todos los componentes en el nivel superior de su lavavajillas.

PT CUIDADOS ESPECIAIS A TER COM A SUA PREPARAÇÃO DE CAPPUCCINO AUTOMÁTICA (P.C.A.)

⚠ IMPORTANTE: consulte o Manual do Utilizador para obter as instruções completas.

1- Para obter uma espuma de leite perfeita, use leite magro ou meio-gordo à temperatura do frigorífico (cerca de 4° C).
2- Enxague após cada preparação à base de leite.
Coloque um recipiente sob a saída de leite, pressione e segure o botão «CLEAN» ☆.
A máquina começa o enxaguamento e pára automaticamente (~16 seg.).
3- Coloque imediatamente o depósito de leite no frigorífico.
4- De dois em dois dias desmonte a Preparação de Cappuccino Automática e lave todas as peças no cesto superior da máquina de lavar louça.

NL SPECIALE ZORG VOOR UW RAPID CAPPUCCINO SYSTEM (R.C.S.)

⚠ BELANGRIJK: lees de gebruikershandleiding voor de volledige instructies.

1- Gebruik voor perfect melkschuim magere of halfvolle melk op koelkasttemperatuur (ongeveer 4° C).
2- Reinig na elke melkbereiding.
Plaats een bak onder de melkuitloop en duw de knop «REINIGEN» ☆. En houd deze vast. De machine begint te spoelen en stopt automatisch (~16 sec.).
3- Plaats de melkcontainer onmiddellijk in de koelkast.
4- Demonteer om de 2 dagen het Rapid Cappuccino System en reinig alle onderdelen in het bovenste deel van de vaatwasser.

GR ΕΙΔΙΚΗ ΦΡΟΝΤΙΔΑ ΓΙΑ ΤΟ ΣΥΣΤΗΜΑ ΣΑΣ ΤΑΧΕΙΑΣ ΠΑΡΑΣΚΕΥΗΣ CAPPUCCINO (R.C.S.)

⚠ **ΠΡΟΣΟΧΗ:** συμβουλευτείτε το Εγχειρίδιο Χρήσης για πλήρεις οδηγίες.

1- Για τον τέλειο αφρό γάλακτος χρησιμοποιείστε αποβουτυρωμένο ή ημι-αποβουτυρωμένο γάλα σε θερμοκρασία ψυγείου (περίπου 4° βαθμούς C).

2- Ξεπλένετε μετά από κάθε παρασκευή roφήματος με γάλα.
Τοποθετήστε ένα δοχείο κάτω από το στόμιο γάλακτος, στρέψτε το διακόπτη ρύθμισης γάλακτος στη θέση «CLEAN» ☆. Η μηχανή αρχίζει το ξέπλυμα και σταματά αυτόματα (~16 δευτερόλεπτα).

3- Βάλτε αμέσως το δοχείο γάλακτος στο ψυγείο.

4- Κάθε δύο ημέρες, αποσυναρμολογήστε το σύστημα R. C. S. και τοποθετείστε όλα τα κομμάτια του συστήματος στο πάνω επίπεδο του πλυντηρίου πιάτων.

CZ ZVLÁŠTNÍ PÉČE O RYCHLÝ CAPPUCCINO SYSTÉM (R.C.S.)

⚠ **DŮLEŽITÉ:** kompletní instrukce najdete v Návodu k použití.

1- Pro optimální mléčnou pěnu používejte plnotučné nebo polotučné vychlazené mléko (o teplotě cca 4° C).

2- Vyčistěte mléčný systém po každém použití. Umístěte vhodnou nádobu pod mléčnou trysku, stiskněte a přidržte tlačítko «CLEAN» ☆. Spustí se proces čištění, zastaví se automaticky (za cca 16 sekund).

3- Nádobu s mlékem dejte do lednice.

4- Každý druhý den rozmontujte Rychlý Cappuccino Systém a umyjte všechny části v horním oddíle myčky nádobí.

HU TEJHABOSÍTÓ (R.C.S.) KARBANTARTÁSA

⚠ **FONTOS:** olvassa el a használati útmutatót az összes tanács megismeréséhez.

1- Információ: a tökéletes tejhab eléréséhez használjon alacsony zsírtartalmú vagy félzsíros hűtőhideg (4° C) tejet.

2- Öblítse át minden habosítás után. Helyezzen egy csészét a tejhabkifolyó alá, majd nyomja le és tartsa lenyomva a «CLEAN» ☆ gombot. A készülék elkezdi az öblítést és automatikusan megáll. (kb. 16 mp).

3- Tegye a Tejhabosítót azonnal a hűtőbe.

4- Kétnaponta szedje szét és mossa el a tejhabosítót a mosogatógépének felső rekeszében.

TR HIZLI CAPPUCCINO SİSTEMİ (H.C.S) İÇİN ÖZEL BAKIM

⚠ **ÖNEMLİ:** talimatların tümü için kullanma kılavuzuna bakın.

1- Mükemmel bir süt köpüğü için, buzdolabı sıcaklığında (yaklaşık 4° C) yağsız veya yarım yağlı süt kullanın.

2- Hazırladığınız her sütlü tariften sonra durulayın.
Süt çıkışının altına bir kap yerleştirin ve «TEMİZLE» ☆ düğmesine basarak basılı tutun. Makine çalkalamaya başlar, otomatik olarak durur (~16 saniye).

3- Süt kabını hemen buzdolabına koyun.

4- İki günde bir, Hızlı Cappuccino Sistemi'ni (H.C.S.) sökün ve tüm bileşenleri bulaşık makinesinin üst rafında yıkayın.

PL SPECJALNE WSKAZÓWKI DOTYCZĄCE DBANIA O SYSTEM RAPID CAPPUCCINO (R.C.S.)

⚠ UWAGA: dokładne wskazówki można znaleźć w instrukcji obsługi.

1- W celu uzyskania idealnej pianki należy użyć mleka UHT tłustego lub półtłustego schłodzonego w lodówce (do temperatury na poziomie ok. 4° C).

2- Płukać po każdym przygotowaniu napoju z mlekiem. Umieścić pojemnik pod wylotem mleka, a następnie nacisnąć i przytrzymać przycisk «CLEAN» ☆.
Urządzenie rozpocznie płukanie i wyłączy się automatycznie (za ok. 16 sekund).

3- Natychmiast umieścić zbiornik na mleko w lodówce.

4- Co dwa dni należy demontować przystawkę Rapid Cappuccino i myć wszystkie jej elementy w górnym koszu zmywarki do naczyń.

RU СПЕЦИАЛЬНЫЙ УХОД ЗА СИСТЕМОЙ ПРИГОТОВЛЕНИЯ КАПУЧИНО (R.C.S.)

⚠ **ВАЖНО:** ознакомьтесь с подробными инструкциями в руководстве по эксплуатации.

1- Для приготовления идеальной молочной пенки используйте полужирное стерилизованное молоко, охлажденное до температуры 4°C.

2- Промывайте контейнер для молока после каждого использования.
Поместите емкость под носик для молока, нажмите и удерживайте кнопку «CLEAN» ☆. Кофемашина начнет процесс очистки и автоматически остановится через 16 секунд.

3- Уберите контейнер с молоком в холодильник.

4- Каждые два дня разбирайте Систему приготовления капучино и промывайте все ее части (можно мыть в посудомоечной машине на верхнем уровне).

UA СПЕЦІАЛЬНИЙ ДОГЛЯД ЗА СИСТЕМОЮ ПРИГОТУВАННЯ КАПУЧІНО

⚠ **УВАГА:** зверніться до інструкції для отримання більш детальної інформації.

1- Для отримання ідеальної молочної пінки використовуйте знежирене або напівзнежирене молоко, охолоджене до температури 4° C.

2- Промивайте контейнер для молока після кожного використання. Розмістіть ємність під носиком подачі молока, натисніть та утримуйте кнопку «CLEAN» ☆. Процес очищення розпочнеться та зупиниться автоматично приблизне через 16 секунд.

3- Поставте ємність з молоком до холодильника.

4- Кожні дві доби розбирайте та ретельно промивайте систему швидкого приготування капучіно під проточною водою.

RO ÎNGRIJIRE SPECIALĂ PENTRU SISTEMUL RAPID CAPPUCCINO (R.C.S.)

⚠ **IMPORTANT:** consultaţi Manualul de Utilizare pentru instrucţiuni complete.

1- Pentru o spumă de lapte perfectă, folosiţi lapte degresat sau semi-degresat la temperatura frigiderului (aproximativ 4° C).

2- Clătiţi după fiecare preparare în care aţi folosit lapte. Plasaţi recipientul sub duza de lapte, apăsaţi şi ţineţi apăsat butonul «CURĂŢARE» ☆. Aparatul porneşte clătirea, se opreşte automat (~16 sec.).

3- Plasaţi recipientul de lapte în frigider imediat.

4- La fiecare două zile, dezasamblaţi Sistemul Rapid Cappuccino şi curăţaţi toate componentele în nivelul superior al maşinii de spălat.

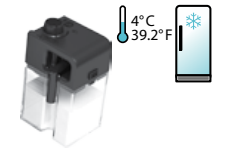

1

2

3

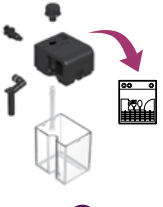

4

DK SÆRLIG PLEJE AF DIT RAPID CAPPUCCINO SYSTEM (R.C.S.)

⚠ **VIGTIGT:** se brugsvejledning for komplette instrukser.

5- For perfekt mælkeskum bruges letmælk eller sødmælk med en temperatur på ca. 4° grader.

6- Rens efter hver tilberedning af mælk. Placer en beholder under mælkeudløbet og hold «CLEAN» ☆ Knappen inde. Maskinen begynder rensning og stopper automatisk (~16 sek.).

7- Sæt øjeblikkeligt mælkebeholderen tilbage i køleskabet.

8- Hver anden dag bør Rapid Cappuccino System skilles ad, og alle dele vaskes i den øverste del af en opvaskemaskine.

NO SPESIALBEHANDLING AV DITT RAPID CAPPUCCINO SYSTEM (R.C.S.)

⚠ **VIKTIG:** det henvises til brukermanualen for fullstendig informasjon.

1- For et perfekt melkeskum, bruk lettmelk eller skummet melk som holder kjøleskapstemperatur (ca. 4° C).

2- Skyll systemet etter hver tilberedning av drikke med melk. Plasser en beholder under melkeutløpet, trykk på og hold inne «CLEAN» ☆-knappen. Maskinen starter skyllingen og stopper automatisk (~16 sek).

3- Sett melkebeholderen umiddelbart i kjøleskapet.

4- Koble fra R.C.S. annen hver dag og vask alle komponentene i oppvaskmaskinens øvre del.

SE SÄRSKILT UNDERHÅLL FÖR DITT RAPID CAPPUCCINO SYSTEM (R.C.S.)

⚠ **VIKTIGT:** se bruksanvisningen för fullständiga instruktioner.

1- För att åstadkomma ett perfekt mjölkskum, använd kylskåpskall lätt- eller mellanmjölk (ca 4° C).

2- Skölj ur behållaren efter varje användningstillfälle.
Placera en behållare under mjölkutloppet och vrid regulatorknappen för mjölk till den står på «CLEAN» ☆. Maskinen börjar sköljas ur och stannar automatiskt (~16 s.).

3- Ställ in mjölkbehållaren i kylskåpet omedelbart.

4- Montera ned Rapid Cappuccino System varannan dag och rengör alla komponenter i den övre delen av en diskmaskin.

FI MAIDONVAAHDOTTIMEN (RAPID CAPPUCCINO SYSTEM) HOITO-OHJEET

⚠ **TÄRKEÄÄ:** katso käyttöohjeet.

1- 72- Voit valmistaa täydellisen maitovaahdon mistä tahansa haluamastasi kylmästä maidosta (n. 4-astetta).

2- 73- Huuhtele maitovaahdottimen putkisto jokaisen käyttökerran jälkeen. Aseta pieni säiliö maitosuuttimen alle ja paina pohjassa «PUHDISTUS» ☆ painiketta.
Huuhtelu kestää noin 16 sekunttia ja pysähtyy automaattisesti.

3- 74- Kun huuhtelu on loppunut, irroita maidonvaahdotin ja laita se jääkaappiin.

4- 75- Pura maidonvaahdotin ja pese kaikki sen osat astianpesukoneessa joka toinen päivä.

US SPECIAL CARE FOR YOUR RAPID CAPPUCCINO SYSTEM (R.C.S.)

⚠ **IMPORTANT:** refer to User manual for complete instructions.

1- For a perfect milk froth, use skimmed or semi-skimmed milk at refrigerator temperature (about 4° C/39° F).

2- Rinse after each milk based preparation. Place a recipient under milk outlet, press and hold the «CLEAN» ☆ button. Machine starts rinsing, stops automatically (~16 sec.).

3- Place the milk container in the fridge immediately.

4- Every two days, disassemble the Rapid Cappuccino System and clean all components in the upper level of a dishwasher.

FR CA ENTRETIEN PARTICULIER POUR VOTRE SYSTÈME RAPIDE CAPPUCCINO (R.C.S.)

⚠ **IMPORTANT:** se référer au mode d'emploi pour des instructions plus complètes.

1- Pour une mousse de lait parfaite, utiliser du lait écrémé ou demi-écremé à la température du réfrigérateur (environ 4° C/39° F).

2- Rincer après chaque préparation de recette de lait. Placer un récipient sous la buse à lait, appuyer et maintenir enfoncé le bouton «NETTOYAGE/CLEAN» ☆.
La machine commence le rinçage et s'arrête automatiquement (env. 16sec).

3- Placer immédiatement le réservoir à lait dans le réfrigérateur.

4- Tous les deux jours, démonter le Système Rapide Capuccino (R.C.S.) et laver tous les composants dans le tiroir supérieur de votre lave-vaisselle.

ES LAT CUIDADOS ESPECIALES PARA SU SISTEMA CAPPUCCINO RÁPIDO (S.C.R.)

⚠ **IMPORTANTE:** consultar el manual del usuario para obtener instrucciones completas.

1- Para una espuma de leche perfecta, usar leche descremada o semi-descremadaa una temperatura de refrigeración (4° C aproximadamente).

2- Enjuagar después de cada preparación a base de leche.
Colocar un recipiente bajo la salida de la leche, presionar y mantener presionado el botón «LIMPIAR» ☆. La máquina comienza el enjuague y se detiene automáticamente (~16 seg.).

3- Colocar el recipiente de la leche en el refrigerador inmediatamente.

4- Cada dos días desarmar el Sistema de Cappucino Rápido y limpiar todos los componentes en el nivel superior de un lavavajillas.

BR CUIDADOS ESPECIAIS A TER COM O SEU SISTEMA RÁPIDO DE CAPPUCCINO (S.R.C)

⚠ **IMPORTANTE:** consulte o Manual do Usuário para obter as instruções completas.

1- Para obter uma espuma de leite perfeita, use leite desnatado ou semi-desnatado à temperatura da geladeira (cerca de 4° C).
2- Enxague após cada preparação à base de leite. Coloque um recipiente sob a saída de leite, pressione e segure o botão «CLEAN» ☆. A máquina começa o enxaguamento e para automaticamente (~16 seg.).
3- Coloque imediatamente o recipiente de leite na geladeira.
4- De dois em dois dias desmonte a Sistema Rápido de Cappuccino e lave todas as peças no cesto superior da máquina de lavar louça ou manualmente.

CN 特别护理您的快速卡布奇诺系统(R.C.S.)。

⚠ **重要事项:** 请参见用户手册以了解完整的指示信息。

1- 为了制备完美的奶沫，请使用冷藏过的温度约为4˚C的脱脂或半脱脂牛奶。
2- 每次制备牛奶饮品后冲洗系统。请在牛奶出口下方放置一个容器，持续按住“清洁”☆按钮。机器开始清洗过程，清洗结束后将自动停止（~16秒）。
3- 使用后立即将奶罐放入冰箱冷藏室中。
4- 应每两天清洁一次快速卡布奇诺系统。将快速卡布奇诺系统的所有部件拆下放入洗碗机的上层进行清洁。

HK 為您的快速CAPPUCCINO系統(R.C.S.)提供專屬護理

⚠ **重要事項:** 請參閱使用指南了解完整的使用方法。

1- 製作完美牛奶泡沫，需使用存於冰箱之脫脂或半脫脂牛奶（約 4°C / 39.2°F）。
2- 每次調製牛奶食譜後進行清洗。於牛奶出口下放置一個容器，長按「CLEAN」☆鍵。咖啡機開始沖洗，並自動停止(~16秒)。
3- 立即把牛奶容器放入冰箱。
4- 每隔兩天，拆除快速Cappuccino系統並把所有組件放入洗碗機內較上層以清洗。

TW 為您的快速卡布奇諾系統(R.C.S.)提供專屬保養。

⚠ **重要訊息:** 請參閱使用手冊了解完整操作方法。

1- 製作完美牛奶泡沫，需使用存於冰箱的脫脂或半脫脂牛奶（約 4°C）。
2- 每次使用後進行清洗。於牛奶出口處放放置一個容器，按住”清潔”☆按鈕。機器開始自動沖洗自動停止。(約16秒)。
3- 立即將牛奶容器放入冰箱內。
4- 每兩天拆除快速卡布奇諾系統以及將所有組件放入洗碗機上側層清洗。

KO 빠른 카푸치노 시스템(R.C.S.) 관리하기

⚠ **중요:** 보다 자세한 지침은 사용 설명서를 참조하십시오.

5- 최상의 우유 거품을 얻으시려면, 냉장고 온도 (약 4° C) 의 무지방 우유 또는 저지방 우유를 사용하십시오.
6- 매 사용 후 헹굼을 진행하십시오. 빈 용기를 우유 분출구 아래에 놓고, “CLEAN” ☆버튼을 누르고 있습니다. 머신이 헹굼을 시작하고, 자동으로 멈춥니다. (~ 16초).
7- 우유통을 즉시 냉장고에 넣으십시오.
8- 이틀마다, 빠른 카푸치노 시스템을 완전히 분해하여 모든 구성 부품들을 식기 세척기의 상단에 위치시킨 후 깨끗하게 세척해 주십시오.

JP ミルクタンクのお手入れ

⚠ **重要:** 取扱説明書の指示に従ってください。

1- よりよいミルクの泡を得るために、成分無調整、または、低脂肪で、温度4℃以下のミルクをご使用ください。
2- ミルクメニューを使用したあとは、洗浄してください。ミルク抽出口の下にカップを置き、”Clean” ☆ シンボルボタンを押してください。洗浄を始め、約16秒で自動的に止まります。
3- 使用後は、ミルクタンクをすぐに冷蔵庫に入れてください。
4- 2日おきに、ミルクタンクを分解し、洗浄してください。食器洗浄機を使用される場合、熱源から遠い上段に置くようにしてください。

AR عناية خاصة بنظام الكابوتشينو السريع. (R.C.S.)

⚠ **هام:** راجع دليل الاستخدام للحصول على جميع التعليمات.

1- للحصول على رغوة حليب مثالية، استخدم الحليب قليل الدسم أو منزوع الدسم بدرجة حرارة البراد (حوالي ٤ درجات مئوية).
2- اغسل النظام بعد كل تحضير لقهوة مع الحليب. ضع وعاء تحت مصب القهوة، ثم اضغط مع الاستمرار على زر التنظيف ☆. تبدأ الماكينة بالغسل، وتتوقف تلقائياً بعد ١٦ ثانية تقريباً.
3- ضع إبريق الحليب في البراد مباشرة.
4- كل يومين، فك نظام الكابوتشينو السريع، ونظف جميع الأجزاء في الجزء العلوي من غسالة الصحون.